




**DIRECTIONS FOR INSTALLATION
USE AND MAINTENANCE**

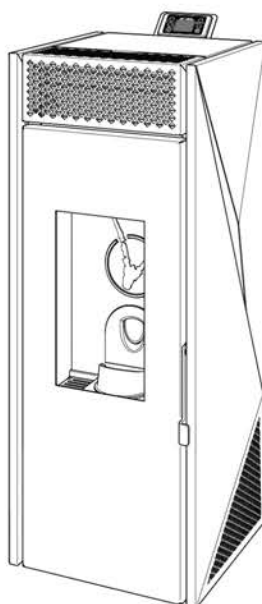

MIRA ETANCHE 8 Wi-Fi

**AIR-TIGHT PELLET STOVES
WITH FAN-ASSISTED HOT AIR**

**THESE INSTRUCTIONS ARE INTEGRAL PART OF THE PRODUCT
PLEASE READ CAREFULLY AND SAVE FOR FUTURE REFERENCE**

Serial number



Foreword

- **Congratulations on your purchase of a INVICTA product, one of the best available on the market!**
- Before installing and operating your appliance, read this instruction manual carefully and save it for future reference.
- For any installation, electrical connection, inspection, maintenance or repair works, refer to authorized, qualified or experienced technicians only.
- The INVICTA pellet stoves and their claddings are distributed in France through a network of dealers-installers. INVICTA does not allow the installation of its own appliances carried out by private customers.
- It is recommended that the first-time lighting of your appliance should be done by the appliance installer who may check and ensure proper appliance operation and draught.



In order for the appliance to work well without the accumulation of pellet, you are advised to pre-set correctly the combustion parameters for pellet loading (see section 3.3.5 - Menu 09) and to carry out accurate daily cleaning of the burner (see section 4.1.3).

- This appliance can be used by children aged 8 years or older and by people with reduced physical, sensory or mental capabilities or without experience or knowledge, if adequately supervised or if instructions relating to the use of the appliance in complete safety have been delivered to them and whether the associated risks have been perceived.



WARNING: All cleaning of the various parts must be done when the appliance is completely cold and disconnected from the electrical power source. Cleaning and maintenance operations to be carried out by the user cannot be done by unattended children.

- Never let your appliance unattended in the presence of children. Do not let the children touch any hot surface areas of the appliance nor let them operate it.



Overpressure in the combustion chamber preceded by a significant and anomalous presence of smoke without flames is the most serious problem to be monitored closely because it can lead to rupture of the glass or cause the appliance door to burst open with the consequent release of smoke into the room. (Refer also to heading 1.5.2).



If the appliance repeatedly fails to light or in the presence of repeated anomalous generation of copious amounts of smoke with no flame in the combustion chamber, stop using the appliance immediately and have both appliance and flue checked by an authorised technician.

- For any further information or requests always contact an authorized dealer who will be pleased to assist you.

Symbols used in this manual

In the present instruction manual some indications are pointed out by the following symbols:



Safety precautions.



Prohibited operation.



Important information.

INVICTA (hereinafter referred to as the "MANUFACTURER" assumes no responsibility for any incidental or consequential damage to people, things or pets resulting from the inobservance of the prescriptions given in this manual, particularly of those marked with following symbols.



SUMMARY	4
1 GENERAL INFORMATION	4
1.1 Warranty	4
1.1.1 Warranty conditions	4
1.1.2 CE label and product serial number	8
1.1.3 Remarks on materials	9
1.2 Certifications	10
1.2.1 Ecodesign 2022	10
1.2.2 Further certifications	11
1.3 Technical dimensions and features	11
1.3.1 Technical drawings stove	11
1.3.2 Technical features	12
1.3.3 Safety clearances from combustible materials	13
1.4 Pellet fuel	14
1.5 Recommendations	15
1.5.1 Safety precautions	15
1.5.2 Warnings for the management of anomalies in the combustion chamber	16
1.5.3 General recommendations	16
1.5.4 End-of-life disposal of appliance components	17
1.6 Safety requirements and devices	19
1.7 Environment requirements	20
1.8 Equipment	21
1.9 Functioning principle	22
2 INSTALLATION	23
2.1 Packaging dismantling and disposal	23
2.2 Installation requirements	23
2.3 Appliance installation	23
2.3.1 Appliance Positioning	23
2.3.2 Outside air intake	25
2.3.3 Flue gases venting into a traditional chimney	26
2.3.4 Smoke outlet into exterior vertical vent (stainless steel lined type)	27
2.3.5 Electrical connection	28
2.3.6 Positioning the room temperature sensor	28
2.3.7 Disassembling the cladding	29
2.4 Wi-Fi module - WiNET	30
2.4.1 Technical feature	30
2.4.2 User instruction manual	30
3 OPERATION	31
3.1 Pre- and first-lighting instructions	31
3.2 Pellet loading	31
3.3 Control panel	32
3.3.1 Ignition	33
3.3.2 Extinguishing	34
3.3.3 Maximum operating power set adjustment	34
3.3.4 Ambient temperature set adjustment	35

3.3.5 Menu	36
3.3.6 Alarm signals	43
3.3.7 SERVICE signal	45
4 CARE AND MAINTENANCE	46
4.1 Recurrent maintenance	46
4.1.1 Cleaning of display screen and exterior cladding elements	46
4.1.2 Cleaning of ceramic glass	46
4.1.3 Recurrent maintenance of type A	47
4.2 Routine maintenance	49
4.2.1 Routine maintenance of type B	49
4.2.2 Routine maintenance of type C	51
4.2.3 Gasket control	52
4.2.4 Cleaning of vertical venting pipes	52
4.3 Putting your appliance out of service	52
4.4 Failures/ Causes / Trouble-shooting	53
4.4.1 Replacement of fuse in service	53
5 FOR THE AUTHORIZED SERVICE TECHNICIAN	54
5.1 Wiring-diagram	54
5.2 Connection to a thermostat or to a switch	55
5.3 Spare parts list	56
5.4 Servicing record	57

1 GENERAL INFORMATION

1.1 Warranty

1.1.1 Warranty conditions

The marketed Products comply with regulations applicable in France and their performances are compatible with non-professional uses.

Non-professional consumer Customers (hereinafter "Consumers") automatically benefit from the legal guarantee of conformity and the legal guarantee against hidden defects free of charge.

In addition, and independently of the legal guarantees, they benefit from a commercial guarantee.

A. Legal guarantees

A.1 Legal guarantee of conformity

INVICTA GROUP undertakes to deliver the Consumer goods that comply with the contractual description and the criteria set out in Article L217-5 of the French Consumer Code.

It is liable for non-conformities existing at the time the Products are delivered and which appear within two years of the delivery.

This guarantee period applies without prejudice to Articles 2224 et seq. of the French Civil Code, with the prescription period starting to run on the day the Consumer becomes aware of the non-conformity.

Non-conformities which appear within a period of twenty-four months from the delivery of the Products are, unless proven otherwise, considered to have existed at the time of delivery.

If a non-conformity is found, Consumers may demand that the delivered Products be made compliant by repair or replacement, failing which the price can be reduced or the sale be cancelled in accordance with the legal conditions.

They may also suspend the payment of all or part of the price or the remittance of the benefit provided for in the contract until INVICTA GROUP has met its obligations under the legal guarantee of conformity under articles 1219 and 1220 of the French Civil Code.

It is up to the Consumer to request the upgrade to conformity from INVICTA GROUP by choosing between repair and replacement. The goods must be brought into conformity within a period not exceeding thirty days following the Consumer's request.

Proof of purchase of the Product (invoice, detailed sales receipt) and photos of the product will be required for the processing of any claim.

The repair or replacement of the non-compliant Product includes, where applicable, the removal and return of the Product and the installation of the repaired or replaced Product.

Any Product brought into conformity as part of the legal guarantee of conformity benefits from a six-month extension of this guarantee.

If the non-compliant Product has been replaced because, despite the Consumer's choice, INVICTA GROUP has not brought the Product into conformity, the replacement will reinitialise the legal guarantee of conformity period starting from the delivery of the replaced Product.

If the requested upgrade to compliance is impossible or entails disproportionate costs under the conditions provided for in Article L 217-12 of the French Consumer Code, INVICTA GROUP may refuse it. If the conditions provided for in article L 217-12 of the French Consumer Code are not met, the Consumer may, after formal notice, pursue the forced execution in kind of the solution initially requested in accordance with articles 1221 et seq. of the French Civil Code.

Finally, the Consumer may demand a price reduction or the cancellation of the sale (unless the non-conformity is minor) in the cases provided for by Article L 217-14 of the French Consumer Code.

When the non-conformity is so serious that it justifies a reduction in price or the immediate cancellation of the sale, the Consumer is not required to request the repair or replacement of the non-compliant Product first.

The price reduction is proportional to the difference between the value of the delivered Product and the value of the Product without the non-conformity.

If the sale is cancelled, the Consumer will be refunded the price paid after the return of the non-compliant Products to INVICTA GROUP, at the latter's expense.

The refund is made on receipt of the non-compliant Product or proof of its shipment by the Consumer and at the latest within the following fourteen days by means of the same payment method as the one used by the Consumer at the time of payment, unless the latter expressly agrees otherwise and in any case without any additional costs.

The above mentioned provisions are without prejudice to the possible award of damages to the Consumer for the loss suffered by the latter as a result of the non-conformity.

A.2 Legal guarantee against hidden defects

INVICTA GROUP is liable to the Consumer for hidden defects as part of the legal guarantee against hidden defects resulting from a material, design or manufacturing defect impacting the delivered products and rendering them unfit for purpose. The Consumer may decide to implement the guarantee against hidden defects for the Products in accordance with Article 1641 of the French Civil Code; in that case, they may choose between the cancellation of the sale or a reduction of the sale price in accordance with Article 1644 of the French Civil Code.

A.3 Exclusion of legal guarantees

INVICTA GROUP cannot be held liable in the following cases:

- Non-compliance with the legislation of the country in which the Products are delivered, which it is the Consumer's responsibility to check before placing the order,
- Misuse, professional use, negligence or lack of maintenance by the Consumer, as well as in case of normal wear and tear of the Product, accident or force majeure.

B. Commercial guarantee applicable to Consumers

In addition to the aforementioned legal guarantee of conformity and against hidden defects, INVICTA GROUP offers a commercial guarantee reserved for Consumers (excluding all professional Clients) (hereinafter the "Commercial Guarantee"), subject to full payment of the invoice corresponding to the Product by the aforementioned Consumer, under the conditions and according to the durations described below.

In accordance with Article D.217-3 of the French Consumer Code, the insert attached to Article D.211-2 of the French Consumer Code is reproduced below, restating the main provisions of the legal guarantee of conformity:

The consumer has two years from the delivery of the goods to obtain the implementation of the legal guarantee of conformity if a non-conformity appears. During that period, the consumer is only required to prove the existence of the non-conformity and not the date it appeared.

When the contract for the sale of the goods provides for the supply of digital content or a digital service on a continuous basis for a period of more than two years, the legal guarantee applies to that digital content or digital service throughout the planned period of supply. During that period, the consumer is only required to prove the existence of the non-conformity of the digital content or service and not the date of its appearance.

The legal guarantee of conformity entails an obligation on the part of the professional, where applicable, to provide any updates needed to maintain the conformity of the goods.

The legal guarantee of conformity gives consumers the right to the repair or replacement of the goods within thirty days of their request, free of charge and without any major inconvenience to them.

If the goods are repaired under the legal guarantee of conformity, the consumer benefits from a six-month extension of the initial guarantee.

If the consumer requests the goods to be repaired but the vendor imposes replacement, the legal guarantee of conformity is renewed for a period of two years from the date the goods are replaced.

The consumer may obtain a reduction in the purchase price by keeping the goods or terminate the contract and obtain a full refund against the return of the goods, if:

1° The professional refuses to repair or replace the goods;

2° The repair or replacement of the good occurs after a period of thirty days;

3° The repair or replacement of the goods causes major inconvenience to the consumer, in particular where the consumer definitively bears the cost of the return or removal of the non-compliant goods, or if they bear the cost of installing the repaired or replaced goods;

4° The non-conformity of the goods persists despite the vendor's unsuccessful attempt to bring it to conformity.

The consumer is also entitled to a reduction in the price of the goods or to the termination of the contract when the non-conformity is so serious as to justify the immediate reduction in price or termination of the contract. The consumer is then not required to request the repair or replacement of the goods beforehand.

The consumer is not entitled to cancel the sale if the non-conformity is minor.

Any period of immobilisation of the goods for the purpose of repair or replacement suspends the guarantee that was still running until the delivery of the repaired goods.

The rights mentioned above result from the application of Articles L. 217-1 to L. 217-32 of the French Consumer Code.

A vendor who obstructs the implementation of the legal guarantee of conformity in bad faith is liable to a civil fine of up to EUR 300,000, which may be increased to 10% of the average annual turnover (Article L. 241-5 of the French Consumer Code).

The consumer also benefits from the legal guarantee against hidden defects under articles 1641 to 1649 of the French Civil Code for a period of two years from the discovery of the defect. This guarantee gives the right to a price reduction if the goods are kept or to a full refund in return for the return of the goods.

B.1 Territoriality

The Commercial Guarantee applies in all countries in which the Products are sold by INVICTA GROUP.

B.2 Content and duration

The Commercial Guarantee only applies to the following Products, excluding all others.

Heating appliances

At the end of the twenty-four (24) month period mentioned in article A.1 above, the heating elements (non-removable parts) are

guaranteed to Consumers, depending on the type of heating appliance they have purchased and according to the following periods:

- For the heating elements of wood burning stoves, fireplaces, inserts and ranges:

The Commercial Guarantee for these products will have a maximum duration of three (3) years, which will begin at the end of the twenty-four (24) month period mentioned in article A.1 above. In all cases, the Commercial Guarantee for these products will end on the fifth anniversary of the purchase of the product by the Consumer.

- For the heating elements of pellet stoves, fireplaces and inserts:

The Commercial Guarantee will only apply if the Products have been installed in a compliant manner and subject to verification of such compliance by the network of INVICTA GROUP authorised technical stations within 3 months of purchase. The Commercial Guarantee for these products will have a maximum duration of one (1) year, which will begin at the end of the twenty-four (24) month period mentioned in article A.1 above. In all cases, the Commercial Guarantee on these products will end on the third anniversary of the purchase of the product by the Consumer.

The Commercial Guarantee is limited to the free replacement of recognised defective parts after inspection by INVICTA GROUP. If the replacement of these parts proves too expensive, INVICTA GROUP may decide to replace the Product. Under no circumstances may INVICTA GROUP be the subject of a claim for damages, under any name or form whatsoever.

The costs of travel, transport, labour, packaging, dismantling and the consequences of immobilisation of the equipment resulting from guarantee operations, are borne by the Consumer.

The following heating appliance components are expressly excluded from the Commercial Guarantee:

- External removable parts,
- Normal wear and tear of the Product such as, for example, a change in appearance (colour, gloss) or corrosion, as well as of the steel of cast iron moving or fixed internal parts of the Product,
- The consequences of improper maintenance or lack of maintenance of the Product, an accident, negligence or error in handling the Product and, more generally, failure to comply with instructions for use and maintenance and, in particular, maintenance by qualified personnel,
- Since the glass withstands a temperature of 750°C and the temperatures in the combustion chamber never reach this temperature, there can be no breakage of the glazing due to overheating. As a result, glass breakage due to improper handling during use or handling of the appliance is not covered by the Commercial Guarantee,
- Seals for any heating appliance, crucibles for pellet stoves and spark plugs for pellet stoves and gas heaters are considered to be wear parts,
- As the fuel used and the operation of the appliance are beyond the manufacturer's control,
- The parts of the fireplace in direct or indirect contact with the igniting fuel, such as:
 - Decorative plates, fire grates, deflectors, hearth log protections, inserts, wood stoves and hydros marketed under the INVICTA or DEVILLE brands,
 - Decorative plates and deflectors for pellet stoves marketed under the INVICTA, or DEVILLE brands,
 - Diffuser tubes, wicks, igniters, cast iron rings for stoves marketed under the INVICTA, or DEVILLE brand names,
 - Refractory bricks, fire grates, deflectors for wood burning ranges marketed under the INVICTA, or DEVILLE brand names,
 - Decorative plates and deflectors for gas heating appliances marketed under the INVICTA, or DEVILLE brands.
- The electrical parts (extractor, fan, electronic board) of pellet stoves marketed under the INVICTA or DEVILLE brands are only covered by the Legal Guarantee.
- The other components, such as:
 - Latches, screws, fans, printed circuits, switches, terminals, electric wires, fireplace electric ducts, inserts, wood stoves marketed under the INVICTA or DEVILLE brands,
 - Latches, screws, decorative plates, deflectors for pellet stoves marketed under the INVICTA or DEVILLE brands,
 - Handles, screws, bricks, thermometers for wood burning ranges marketed under the INVICTA, or DEVILLE brand names.

The following are also excluded from the Commercial Guarantee:

- Any damage caused by mechanical or electrical components that are not supplied by the manufacturer of the Product and/or are prohibited by laws governing heating appliances.
- Damage caused by any use other than that intended for the Product concerned, in particular the use of any unauthorised fuels.

The Commercial Guarantee applies to any defect in material or manufacturing, subject to the non-professional, reasonable use of the appliance in accordance with the operating instructions provided with the appliance and any applicable regulations.

INVICTA GROUP is released from any obligation relating to the Commercial Guarantee in the event of Product installations that are not compliant with any legal, regulatory and/or administrative requirements and trade practices, or if the Product is altered.

The Commercial Guarantee does not cover any damage, whether total or partial, direct or indirect, caused by use that does not comply with the instructions for use and/or maintenance, is abnormal, negligent or incorrect, or results from a cause unrelated to the intrinsic qualities of the Product.

This Commercial Guarantee is excluded for professional use of the Product.

Proof of Product purchase (invoice, detailed sales receipt) and photos will be requested for the processing of any claims under the Legal Guarantee or the above mentioned contractual guarantee.

The Contractual Guarantee is only valid if the appliance has been installed at the address indicated on the guarantee certificate provided with the appliance and if the purchaser has registered the Product on the www.invicta.fr website or by calling the toll-free number 0.809.10.00.13 within 3 months of the purchase, it being specified that in all cases, the Consumer is required to

provide proof of purchase of the Product for the implementation of the Contractual Guarantee.

B.3 Transfer of the guarantee

The Commercial Guarantee is linked to the Product sold by INVICTA GROUP, it is automatically acquired by any new non-professional owner consumer for the remaining duration.

B.4 Price of the guarantee

The Commercial Guarantee as defined above does not entail any additional payment by the Consumer.

B.5 Immobilisation of the Product

Any period of immobilisation of the Product suspends the remaining guarantee period from the date of the Customer's request for intervention or from the date the Product is made available for replacement or repair if this starting point is more favourable to the Customer. The duration will also be suspended in the event of negotiations between the guarantor and the Customer with a view to an amicable settlement of the dispute.

B.6 Amicable settlement of disputes

In the event of difficulty in applying this guarantee, the Consumer has the possibility, before any legal action, to seek an amicable solution, in particular by contacting INVICTA GROUP's After-Sales Service.

1.1.2 CE label and product serial number

The serial number is printed on the cover of the appliance "installation, use and maintenance" manual. It is highly recommended that the serial number be quoted for any request.

This number is also printed at the bottom of the CE label located on the back side of the unit.

			
EN 16510-1:2022, EN 16510-2-X:2022			
DoP:		EDP:	
		NB:	
P_{nom}	kW	P_{part}	kW
P_{SHnom}	kW	P_{SHpart}	kW
P_{Wnom}	kW	P_{Wpart}	kW
η_{nom}	%	η_{part}	%
η_s	%	EEI	-
CO_{nom} (13% O ₂)	mg/Nm ³	CO_{part} (13% O ₂)	mg/Nm ³
NO_{xnom} (13% O ₂)	mg/Nm ³	NO_{xpart} (13% O ₂)	mg/Nm ³
OGC_{nom} (13% O ₂)	mg/Nm ³	OGC_{part} (13% O ₂)	mg/Nm ³
PM_{nom} (13% O ₂)	mg/Nm ³	PM_{part} (13% O ₂)	mg/Nm ³
p_{nom}	Pa	p_{part}	Pa
p_W	kPa (bar)	s	mm
d_R	mm	d_S	mm
d_C	mm	d_P	mm
d_F	mm	d_L	mm
d_B	mm	d_{non}	mm
e_{lmax}	kW	e_{lmin}	kW
e_{lSB}	kW	E, f	V, Hz
W_{max}	W		V Hz
Designed in Italy - Made in Italy			
SN CODE Réf	0000000000000000 0000000000X 00000000		 1/2

Example of CE label with serial number

SYMBOLS	PLATE KEY
nom	data taken at rated power
part	data taken at reduced power
$P_{nom}/part$	Heat output
$P_{SHnom}/part$	Space heat output
$P_{Wnom}/part$	Water heat output
$\eta_{nom}/part$	Efficiency
η_s	Seasonal space heating efficiency at nominal heat output
EEI	Energy Efficiency Index
$CO_{nom}/part$	CO emissions (at 13% O ₂)
$NO_{xnom}/part$	NO _x emissions (at 13% O ₂)
$OGC_{nom}/part$	hydrocarbon emissions (at 13% of O ₂)
$PM_{nom}/part$	particulate matter emissions (at 13% O ₂)
$p_{nom}/part$	minimum flue draught
p_W	maximum operating pressure
s	thickness of protective insulating material
d_R	minimum distance to combustible materials - rear
d_S	minimum distance to combustible materials - side
d_C	minimum distance to combustible materials - ceiling
d_P	minimum distance to combustible materials - frontal radiation
d_F	minimum distance to combustible materials - front floor
d_L	minimum distance to combustible materials - lateral radiation
d_B	minimum distance to combustible materials - bottom
d_{non}	minimum clearance from non combustible materials
e_{lmax}	consumption of electrical auxiliary energy at nominal heat output
e_{lmin}	consumption of electrical auxiliary energy at part load heat output
e_{lSB}	consumption of electrical auxiliary energy at standby
E, f	supply voltage and frequency
W_{max}	maximum electrical input
	read and follow the instructions for use

1.1.3 Remarks on materials



The materials used to manufacture this product have been thoroughly checked and are guaranteed to be free from defects.

The components below are subject to common wear and tear (corrosion or progressive decay) that cannot constitute grounds for objection due to the type and features of the materials used in the construction of the parts and due to the product operational conditions.

- The internal movable or fix parts in steel or cast iron: are made of high temperature resistant materials but could distort and settle if using the wrong fuel or exceeding the fuel amount suggested in this manual. However they can eventually present rusty or oxidized parts.
- The burn pots may be subject to high overheating, and with the time can be subject to corrosion and distortion or oxidation.
- Gaskets: are necessary to make the firebox airtight and to hold the ceramic glass panel in place; their distortion absorbency and elasticity will be guaranteed only by following the instructions under section 4.1.2 regarding the ceramic glass cleaning; mind that if the glass detergent trickles down the glass, the gaskets could harden letting the glass panel loose.

Misuse of the following components could result in their breakage.

- The ceramic glass panels: are thoroughly factory-checked. Please note that with the techniques currently available, the manufacturing of glass ceramic panels totally free from any kind of defects cannot be guaranteed and therefore any irregularities that might be noticed have to be considered within the specifications of this material and are not prejudicial to its strength nor to the correct functioning of the firebox. Note: Please refer to section 4.1.2 for directions on cleaning.

1.2 Certifications

1.2.1 Ecodesign 2022



Language: ENG

INFORMATION REQUIREMENTS FOR SOLID FUEL LOCAL SPACE HEATER											
Trademark:											
Product type:				-							
Model:				MIRA ETANCHE 8 Wi-Fi							
Equivalent models:				-							
Indirect heating functionality:				☒ no							
Direct heat output:				8,0 kW							
Indirect heat output:				0,0 kW							
Fuels	Preferred fuel [yes / no]	Other suitable fuel(s) [yes / no]	η_s [%]	Space heating emissions at nominal heat output				Space heating emissions at minimum heat output			
				PM	OGC	CO	NOX	PM	OGC	CO	NOX
				mg/Nm ³ (13%O ₂)				mg/Nm ³ (13%O ₂)			
Compressed wood in the form of pellets or briquettes	☒ yes	☒ no	86%	20	5	300	200	20	60	300	200
Energy efficiency class:				A+							
Energy efficiency index (EEI):				126							
CHARACTERISTICS WHEN OPERATING WITH THE PREFERRED FUEL ONLY:											
HEAT OUTPUT											
Nominal heat output		P_{nom}		8,0				kW			
Minimum heat output (indicative)		P_{min}		3,1				kW			
USEFUL EFFICIENCY (NCV as received)											
Useful efficiency at nominal heat output		$\eta_{\text{th, nom}}$		89,5				%			
Useful efficiency at minimum heat output (indicative)		$\eta_{\text{th, min}}$		94,4				%			
AUXILIARY ELECTRICITY CONSUMPTION											
At rated heat output		$e_{\text{el, max}}$		0,063				kW			
At minimum heat output		$e_{\text{el, min}}$		0,049				kW			
In standby mode		$e_{\text{el, s}}$		0,004				kW			
PERMANENT PILOT FLAME POWER REQUIREMENTS											
Pilot flame power requirement (if applicable)		P_{pilot}		N.a.				kW			
TYPE OF HEAT OUTPUT or ROOM TEMPERATURE CONTROL											
With electronic room temperature control plus week timer								(F2)		7%	
OTHER CONTROL OPTIONS											
With distance control option								(F3)		1%	
Observe the specific precautions for installation, assembly and maintenance indicated in the manual accompanying the product											
CONTACTS				ISSUED ON:				EMPOWERED PERSON:			
Invicta Group Zone Industrielle Lieu-dit "La Gravette" - 08350 DONCHERY - FR Tél: +33 (0)3 24 27 71 71 www.invicta-group.fr accueil@invicta-group.fr				07/08/2025				 Ing. Andrea Tezza Technical Manager			

1.2.2 Further certifications



We declare that the appliance
MIRA ETANCHE 8 Wi-Fi

complies with legislative provisions that implement the following directives and regulations:

- Directive 2011/65/EU (RoHS Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment).
- Directive 2014/30/EU (EMCD Electromagnetic Compatibility) and subsequent amendments.
- Directive 2014/35/EU (LVD Low Voltage) and subsequent amendments.
- Regulation (UE) 305/2011 (Building Products).

1.3 Technical dimensions and features

1.3.1 Technical drawings stove

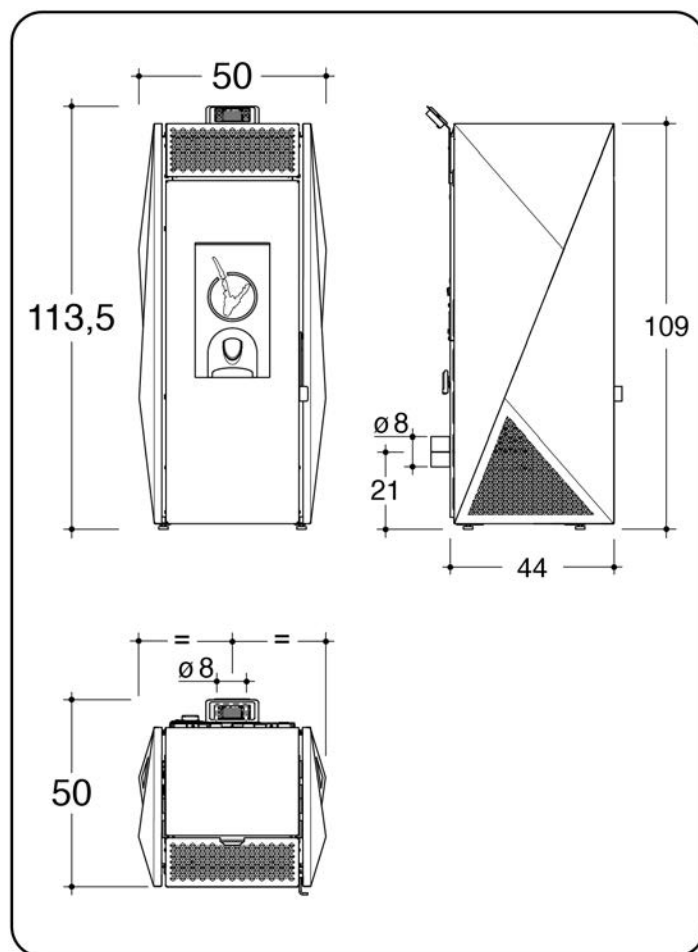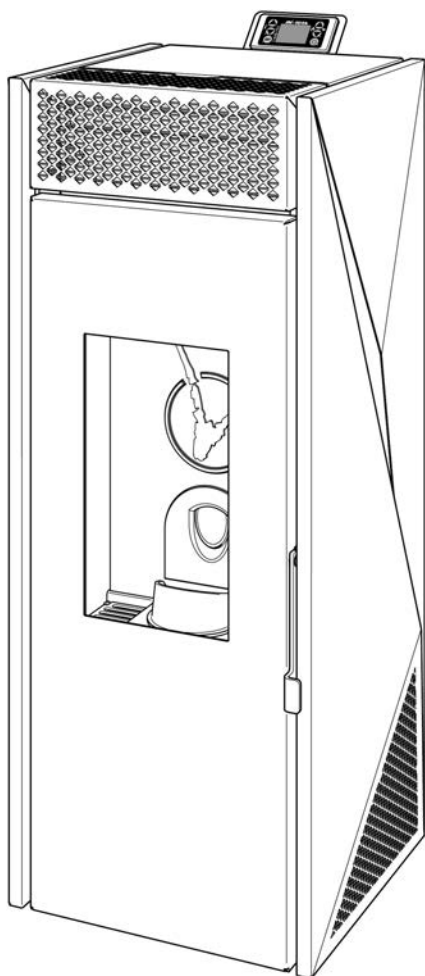

1.3.2 Technical features

Readings in accordance with standard EN 16510-2-6:2022		MIRA ETANCHE 8 Wi-Fi		
Output	simb.	nominal (nom)	minimum (part)	
Thermal Output	P	8,0	3,1	kW
Space heat output	P_{SH}	8,0	3,1	kW
Water heat output	P_W	-	-	kW
efficiency	η	90	94	%
seasonal space heating efficiency at nominal heat output	η_s	86	-	%
energy efficiency index	E_{EI}	126		W
CO emissions (at 13% of O ₂)	CO	0,0240	0,0240	%
CO emissions (at 13% of O ₂)	CO	300	300	mg/Nm ³
NOx emissions (at 13% of O ₂)	NO _x	200	200	mg/Nm ³
hydrocarbon emissions (at 13% of O ₂)	OGC	5	60	mg/Nm ³
particulate matter emissions (at 13% of O ₂)	PM	20	20	mg/Nm ³
flue draught pressure	p	7	5	Pa
maximum operating pressure	p_W	-		kPa
thickness of protective insulating material	s	0		mm
consumption of electrical auxiliary energy	e_l	0,063	0,043	kW
consumption of electrical auxiliary energy at standby	e_{lsb}	0,004		kW
nominal voltage	E	230		V
nominal frequency	f	50		Hz
maximum electrical input	W_{max}	350		W
chimney flue class	T_{class}	T200G		
maximum chimney load sustainable by the appliance	m_{chim}	20		kg
flue gas temperature	$T_{f,g}$	156	77	°C
flue gas temperature downstream of the flue spigot/socket	T_s	193	96	°C
total capacity of flue gases	$\Phi_{f,g}$	5,5	3,0	g/s
fuel	-	wood pellet		
fuel consumption per hour	m_h	1,77	0,69	kg/h
receptacle capacity	-	16,5		kg
burn time	-	9,0	23,5	h
flue gases outlet	d_{out}	Ø 80		mm
combustion air intake	-	Ø 60		mm
protection degree IP	-	IP20		
heatable area at certified power (*)	-	92		m ²
net weight	m	110		kg
operation mode continous (CON) or intermittent (INT)	CON/INT	CON		
type of appliance	-	Type CC50		

* The value indicated for heatable area (referred to areas with 2.70 m height with heating requirement between 32 and 33 W/m³) is merely indicative and it is calculated on the basis of perfectly insulated rooms and with the appliance installed in the best position to ensure an even distribution of the thermal flow. Given the countless different installation situations that can be found, the MANUFACTURER does not guarantee the matching of the indicated values in all contexts.


i IMPORTANT (FOR THE TECHNICIAN): When sizing the flues of wood pellet burning appliances using dedicated software applications, you can use a pressure value of 0 Pascal as a reference.

1.3.3 Safety clearances from combustible materials

i If walls have wood paneling or other combustible materials, keep a minimum safe clearance as shown in the following diagram and table.

It is recommended that particularly delicate objects or pieces of furniture be installed at higher distances than those previously recommended, if you assume they could be damaged by the changes in temperature produced during the appliance operation.

With non-combustible walls, place the appliance at a minimum safe clearance (d_{non}) as shown in the table below.

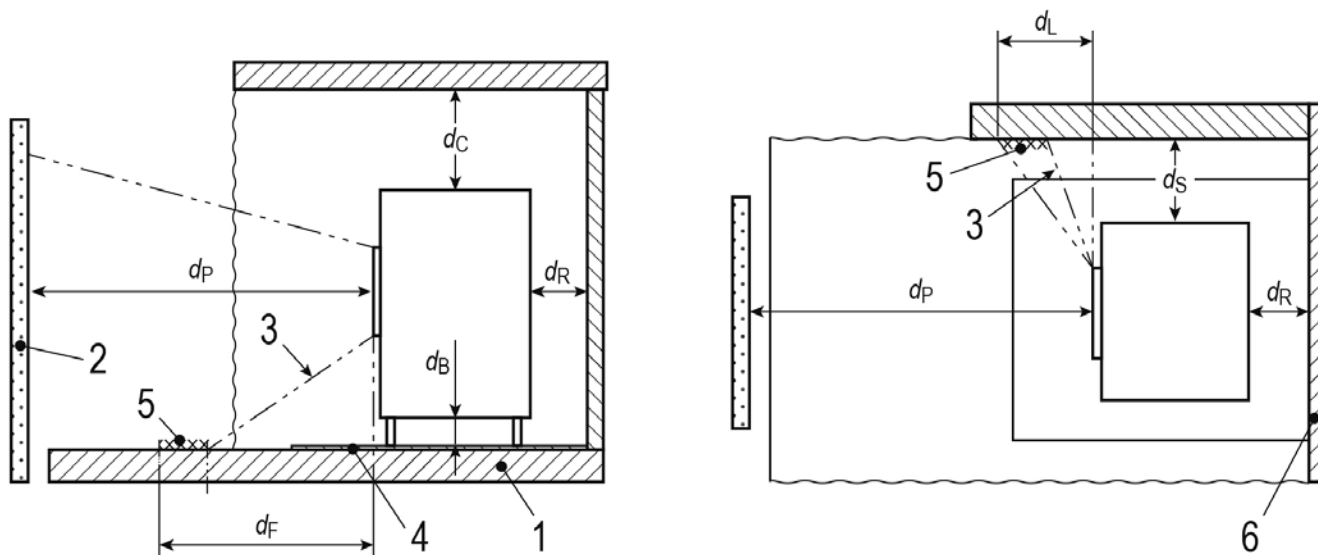

Side view

Top view

	KEY
1	floor
2	combustible material in the front
3	radiation zone
4	floor protection
5	surface subject to radiation to be protected
6	combustible surfaces

	safety clearances from combustible materials	mm
d_R	back clearance	100
d_S	side clearance	200
d_B	down clearance	0
d_C	up clearance	750
d_P	front radiation	2000
d_F	floor radiation	1000
d_L	side radiation	750
d_{non}	minimum clearance from NON combustible materials	100

i In case of floors made of inflammable material, it is necessary to place an appropriate protection underneath the appliance (for example a 20/10 steel floor protection mat).

1.4 Pellet fuel

Wood pellets are made through sawdust drawing after processing natural dry wood, whose content of lignin gives compactness to the material and enables to manufacture pellets without using any adhesives or binders.

The section of wood pellets varies from 6 to 12 mm.; the standard length is from 5 to 30 mm.; the density of a high grade pellet fuel varies from 1000 to 1400 kg/cu.m.

i **These airtight stoves are designed to use wood pellets based on sawdust pressed into small logs (called "pellets"), certified to class A1 according to ISO 17225-2, ENplus-A1, DIN Plus or NF 444 category "NF Granulés Biocombustibles Bois Qualité Haute Performance".**

Various types of wood pellets are available on the market and their characteristics depend on the wood mixtures used for their manufacturing.

The pellet fuel produced from natural wood, free of dirt or any other impurities, originally contains an extremely low moisture content, from 6% to 8%, allowing its use without previous seasoning. Mind that the moisture content of pellets can easily change if the fuel is stocked in unsuitable places and that an increase in the moisture content may also increase the size of pellets, which may result in the blockage of the fuel feeding into the burn pot. A rise in the moisture content may also vary the molecular structure of pellets, which may convert into a viscous and low combustible material.

⊘ It is FORBIDDEN to use fuels other than wood pellet.

⊘ The use of pellets manufactured from rejects of semifinished wood products containing binders and paint is FORBIDDEN; these pellets are not included in the category of approved or recommended pellet fuels.

The heat output of natural pellets can achieve 4600 Kcal/kg and a very high efficiency is ensured when they are used with the suitable appliances.

Pellets are more economical as a fuel than natural gas or oil.

Their smoke emission rate comply with the most stringent European regulations referring to environmental protection, thanks to their peculiar characteristics teamed up with the technical features of this appliance.

Available on the market in 15 kg. bags, pellets can be stocked easily.

i **For the proper and safe operation of this appliance, it is very important that the pellets are stored in a dry place.**

After extensively testing, for the good functioning and efficiency of the appliance the MANUFACTURER highly recommends using fuel of good quality.

Pellets must be made from natural wood sawdust only, free from other materials.

! **ATTENTION: Loading the pellet through the feeding system on the appliance is influenced by the characteristics of the pellet itself. Introducing different supplies of pellets you can find loading differences that can reach 20/25%, which translate into variations in thermal power introduced.**

Therefore it is always advisable to check, at the first ignition and at each change of supply of pellets, over a period of time not less than 6 continuous hours that the combustion does not present a tendency to extinguish or accumulate pellets in the burner (see paragraph 3.3.5).

! **CAUTION: The use of different fuels (maize, nutshells, etc.), low grade pellets or pellets with different sizes than those we recommend, may cause damages to the appliance component parts thus voiding the warranty granted and releasing the manufacturer from any responsibility.**

! **CAUTION: The use of a pellet which produces lots of combustion residues can make the appliance get dirty more rapidly, thus causing frequent cases of pellet buildup. In such case it is absolutely necessary to reduce the time interval between routine maintenances of type B to no more than 250÷300 hours of use.**

1.5 Recommendations

1.5.1 Safety precautions



IMPORTANT!!! For the proper and safe operation of this appliance and the electrical components in it, and in order to prevent any possibility of causing serious injury, the instructions given in this manual must always be followed.



CAUTION: The installation, electrical connection, operation control, repair and maintenance works, must be executed by qualified staff only.



CAUTION: If there has been a fire in the flue it is necessary to turn the appliance off and call the fire department and check whether the chimney stack and flue pipe have been visibly damaged. Make any repairs before any further use of the combustion system.



ATTENTION: this appliance **CAN NOT** be installed using a shared chimney flue.



CAUTION: All national and local regulations and European Standards shall be complied with when installing the appliance.



CAUTION: All national and local regulations and European Standards shall be complied with when operating the appliance.



CAUTION: The accident-prevention and safety requirements stated in this manual must be followed carefully.



CAUTION: This manual must be read and understood in every part, and the use of the controls must be clear before operating the appliance or executing any works on it.



WARNING: The appliance operation, controls adjustment and programming must be done by adult persons only. Incorrect operation may cause harm, damage and/or malfunctions.



WARNING: Any tampering or unauthorized replacement of parts of the appliance could cause dangerous situations for the operator's safety, relieving the MANUFACTURER from any civil and criminal liability.



WARNING: During operation, some of the appliance surface areas may become very hot; we highly recommend not to leave the unit unattended in the presence of children, elderly and disabled people.



Do not touch the glass; the glass provides visibility of the flames and also contributes to the distribution of heat through irradiation, so it reaches very high temperatures.



CAUTION: To avoid overheating the appliance with consequential shut-down do not obstruct or cover with any cloth, towel, etc. the warm air outlet.



ATTENTION: Keep the fuel and inflammable materials at proper distance.



CAUTION: Leaning or hanging on the opened door imprudently, during cleaning operations, could cause the turnover of the appliance; it is therefore advisable not to do so and to take the necessary precautions especially when children, elderly or disabled people are present.



WARNING: Never use flammable liquids (alcohol or petrol) to speed up the lighting of a wood fire: it is extremely dangerous. Alcohol and petrol release highly flammable vapours, which could provoke the risk of burns.



WARNING: Use of the appliance (in areas with beds/couches) during periods dedicated to sleep is forbidden.

1.5.2 Warnings for the management of anomalies in the combustion chamber

 **Strict compliance with all the instructions for installation (in accordance with statutory legislation), use and maintenance given in this manual is sufficient to ensure correct operation of the appliance and avoid potential problems.**

 **Malfunctions, both minor and serious, are frequently primarily caused by failure to comply with one or more of the prescriptions set down in this manual.**

 **Overpressure in the combustion chamber preceded by a significant and anomalous presence of smoke without flames is the most serious problem to be monitored closely because it can lead to rupture of the glass or cause the appliance door to burst open with the consequent release of smoke into the room.**

To avoid this risk, take care to:

- Ensure the burner is always clean before starting the appliance.
- Remove all encrustations and deposits caused by pellets of the incorrect size or of poor quality.
- Empty the burner and clean it thoroughly before attempting to light the appliance after a failed ignition event.
- Never attempt to load pellets into the burner by hand, either before starting the appliance or while it is operating.
- Refit the burner into its location after each maintenance task, removing any residues around the seating surface.
- When the appliance is in operation check for possible pellet accumulations.
- Monitor appliance operation to check for a tendency of the flame to extinguish.
- Remove any accumulations of unburnt pellets in the burner following a failed ignition event or a no pellet alarm, before re-starting the appliance. For safety reasons, never re-load previously removed unburnt pellets into the pellet fuel hopper.

In the presence of pellet accumulations with the anomalous generation of copious smoke without flame, observe the following prescriptions:

- Do not disconnect the appliance from the electrical power supply under any circumstances.
- Do not open the appliance door.
- As a precaution, open the windows of the room in which the appliance is installed in order to provide adequate ventilation.
- Do not stand in front of the appliance. Keep clear of the area until the smoke has been completely dispersed.

 **If the appliance repeatedly fails to light or in the presence of repeated anomalous generation of copious amounts of smoke with no flame in the combustion chamber, stop using the appliance immediately and have both appliance and flue checked by an authorised technician.**

 **WARNING: It is PROHIBITED to use and try to re-ignite the appliance after a deflagration in the combustion chamber. Only a qualified technician should be contacted to check and repair any damaged parts.**

1.5.3 General recommendations

 **CAUTION:** This appliance is intended for the use it has been designed and manufactured for only.

 **CAUTION:** Do not use this unit as a cooker.

 **ATTENTION:** Don't use the appliance as an incinerator.

 **CAUTION:** Do not use the appliance in the case of faults or malfunctions, and if these should occur while it is on, switch it off immediately by prolonged pressing of the button [P4] (see section 3.3.2). Only disconnect the appliance from the mains once it has shut down completely (electrical plug disconnected).

 **In order to avoid releasing smoke in the room, it is FORBIDDEN to operate the appliance with the door open, without the glass panel or with broken glass.**

 **Inspect and clean the exhaust venting system periodically.**


 **Do NOT spray the appliance with water to clean any of its parts.**

- i** For repairing, refer to authorized professionals and ask for original replacement parts only.
- i** Keep this instruction manual as an integral part of the product for future reference. It must be supplied together with the unit if this is resold or moved to another place, so as to allow the next user and installer to get acquainted with its operating instructions and requirements. Should the manual be lost or become unreadable, call Caminetti Montegrappa for a new copy.

1.5.4 End-of-life disposal of appliance components

- i** Responsibility for the demolition and the disposal of the appliance lies exclusively with the owner who will have to act in compliance with the regulations in force in his own Country regarding safety, respect and protection of the environment.
- i** At the end of his useful life the appliance cannot be disposed of together with urban refuse. It can be taken to special waste collection centers provided by local government, or to a dealer providing this service.
- i** The separate disposal of the appliance (taking it to authorized recycling centres) avoids the possible negative consequences for the environment and human health resulting from inappropriate disposal and allows to recover the materials it is made of, in order to obtain significant energy and resources savings.
- i** For more information about how to collect electric and electronic equipment and appliances, batteries and accumulators, please contact your local Council or Public Authority competent to issue the relevant permits.
- i** The abandonment of the appliance in accessible areas is a serious danger to humans and animals. The responsibility for any damage to people and animals always lies with the owner.
- i** Upon demolition, CE marking, this manual, the declaration of disposal, the manual for installation and other documents relating to this appliance must be preserved. Remember that any registration with the regional land registry should be annulled.

! WARNING: Improper disposal of the appliance by the user implies the application of administrative sanctions provided by law.

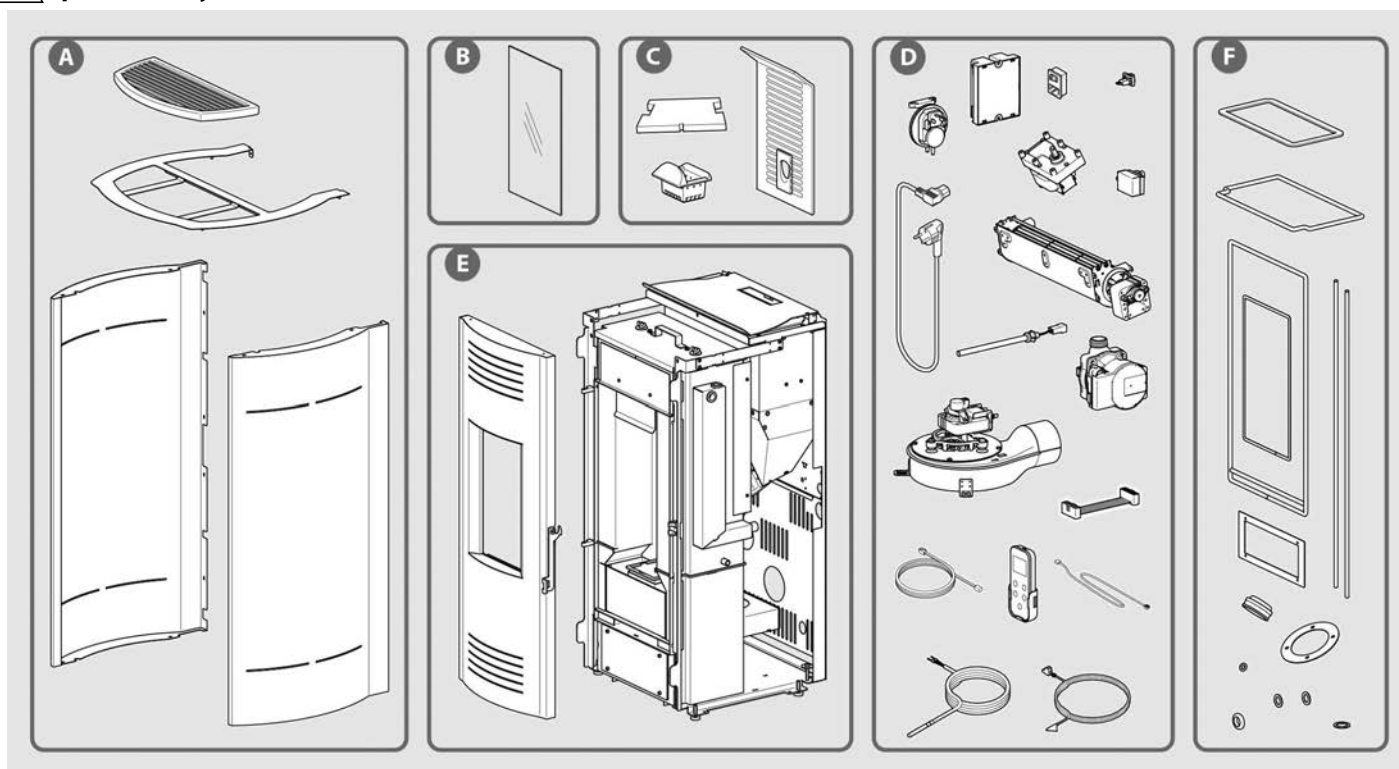

The exploded view and the following table show and list the components of the appliance and the instructions for correct separation and disposal. In particular, electrical and electronic components must be separated and disposed of at authorized centres according to the WEEE Directive 2012/19/EU.

A. EXTERNAL LINING

If present, dispose of separately according to material:

- metal
- glass
- tiles or ceramic material
- stone

B. DOOR GLASS

If present, dispose of separately in glass recycle containers.

C. INTERNAL LINING

If present, dispose of separately according to material:

- metal
- tiles or ceramic material

D. ELECTRICAL AND ELECTRONIC COMPONENTS

Wiring harnesses, motors, fans, circulating devices, displays, sensors, spark plugs, electronic boards.

Dispose of separately at authorized centres, according to the indications of the WEEE Directive 2012/19/EU.

E. METAL STRUCTURE

Dispose of separately in metal recycle containers.

F. NON-RECYCLABLE COMPONENTS

Handles, Gaskets and piping made of rubber, silicone or fibres, etc.

Dispose of in mixed waste.


Information for management of electric and electronic appliance waste containing batteries or accumulators in accordance with European Directive 2012/19/EC.

i This symbol, which is used on the product, batteries, accumulators or on the packaging or documents, means that at the end of its useful life, this product, the batteries and the accumulators included must not be collected, recycled or disposed of together with domestic waste.

i Improper management of electric or electronic waste or batteries or accumulators can lead to the leakage of hazardous substances contained in the product. For the purpose of preventing damage to health or the environment, users are kindly asked to separate this equipment and/or batteries or accumulators included from other types of waste and to arrange for disposal by the municipal waste service. It is possible to ask your local dealer to collect the waste electric or electronic appliance under the conditions and following the methods provided by national laws transposing the Directive 2012/19/EC.

i Separate waste collection and recycling of unused electric and electronic equipment, batteries and accumulators helps to save natural resources and to guarantee that this waste is processed in a manner that is safe for health and the environment.

i For more information about how to collect electric and electronic equipment and appliances, batteries and accumulators, please contact your local Council or Public Authority competent to issue the relevant permits.

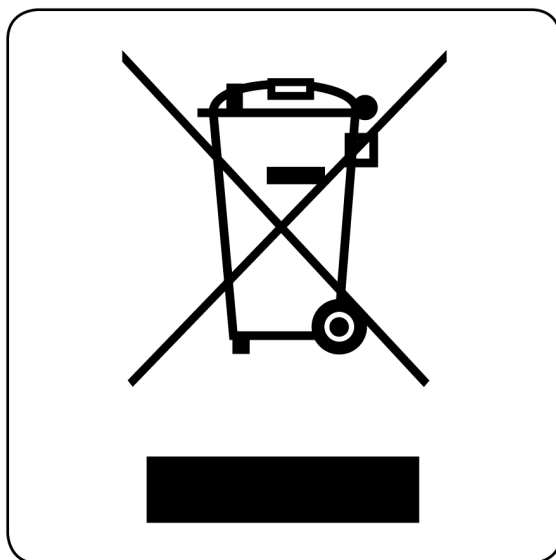

1.6 Safety requirements and devices

The appliance is provided with the following safety devices:

- Sensor for measuring the flue gas temperature: it indicates that ignition has taken place; it switches on the convection fan; it indicates the unprogrammed fire extinction; it stops the smoke exhauster and the convection fan after the programmed fire extinction.
- Sensor for measuring the temperature in the fuel hopper: if it senses the temperature in the pellet hopper to be higher than the preset safety temperature, it will shut down the appliance.
- Pressure switch to control the negative pressure inside the combustion chamber: switches the appliance off, if it is switched on, or prevents it from being switched on, if it is switched off, whenever the door of the combustion chamber is open or the inspection openings for maintenance work are open, if the cover of the filling aperture is open; It also triggers in the case of an overpressure in the smoke exhauster flue or a negative pressure in the room where the appliance is installed to prevent the flame from being sucked out of the combustion chamber towards the pellet hopper, thus preventing the fuel contained therein from catching fire.



It is FORBIDDEN to disconnect the safety devices.

Once the troubles that activated the safety alarms are eliminated, the appliance can be re-started and operated normally.



IMPORTANT: The appliance must be positioned so as to allow easy access to the plug.



WARNING: The appliance must be connected to an insulated flue of the correct size.



NOTE: This section has been drawn up considering the appliance as being operated in accordance with the requirements and directions on the appliance use indicated under chapter 3.

If the appliance is not used in the conditions described in this instruction manual, the MANUFACTURER declines all responsibility for damage to persons, things and animals that may occur. The MANUFACTURER also disclaims any liability for damage to persons, property and animals caused by failure to comply with the following recommendations:

- A) During any maintenance, adjusting, cleaning and servicing works, the appliance must not be left unattended in order to avoid incidental starting by third party.**
- B) Do not mishandle and/or remove any safety devices in the appliance.**
- C) Provide an efficient connection to the exhaust venting system.**
- D) Check that the room where the appliance is installed is aerated as prescribed.**

1.7 Environment requirements



IMPORTANT: To ensure its proper operation, the appliance shall be located in a ventilated room where an air flow allowing the complete combustion of wood can be admitted according to the installation requirements under the local standards currently in force.

The air supply must be sufficient for proper combustion and to provide ventilation of the room, the volume of which cannot be less than 20 cu.m.

The natural admission of air must be provided through a permanent opening made on the exterior wall(s) of the room to be aired (for the minimum section dimensions see section 2.3.2); the outside fresh air intakes must be made in such a way they can never be obstructed (check regularly).

Air entering the room where the appliance is installed from contiguous room(s) is permitted provided it is admitted from a space which is aired directly from outside, a space which is not used as a bedroom or a bathroom and where fire ignition could never occur, as in a garage or in a combustible warehouse, in compliance with the requirements under the local standards currently in force.

40 cu.m/h of air is required in order to ensure proper fuel combustion.



It is FORBIDDEN to install the appliances in rooms where the depression measured between the internal and external environment is greater than 4 Pa. The possibility of coexistence with devices such as extractor hoods, mechanical ventilation systems, further generators of heat, must be evaluated in the harshest operating conditions both during preventive checks and during the ignition test phase.

A greater than 4 Pa depression inside the room where the appliance is installed may cause the flame to be drawn from the combustion chamber towards the pellet tank, with the consequent risk of a fire inside the tank itself.



If the appliance operates in the presence of depression inside the room in which it is installed, caused by the operation of devices such as hoods, mechanical ventilation systems or other generators, during the pellet loading phase the flame is sucked through the tank which can cause distillation of the pellets and the consequent formation of creosote inside the screw auger.

The occurrence of this phenomenon repeated over time can lead to the blockage of the screw inside the loading system and the consequent malfunction of the heat generator.




It is FORBIDDEN to install the appliance near objects made of combustible materials (curtains, pieces of furniture, carpets,...).

If the appliance is installed on flooring that may be flammable, a 2 mm thick (minimum) non-flammable floor protector must be laid underneath that is larger than the unit's base.



The appliance is not designed to be operated in environments where materials may explode. Therefore, it is FORBIDDEN the use of the appliance in an explosive atmosphere or in a space where materials or machineries may produce gas or dust emissions in such a quantity they may cause an explosion.

1.8 Equipment

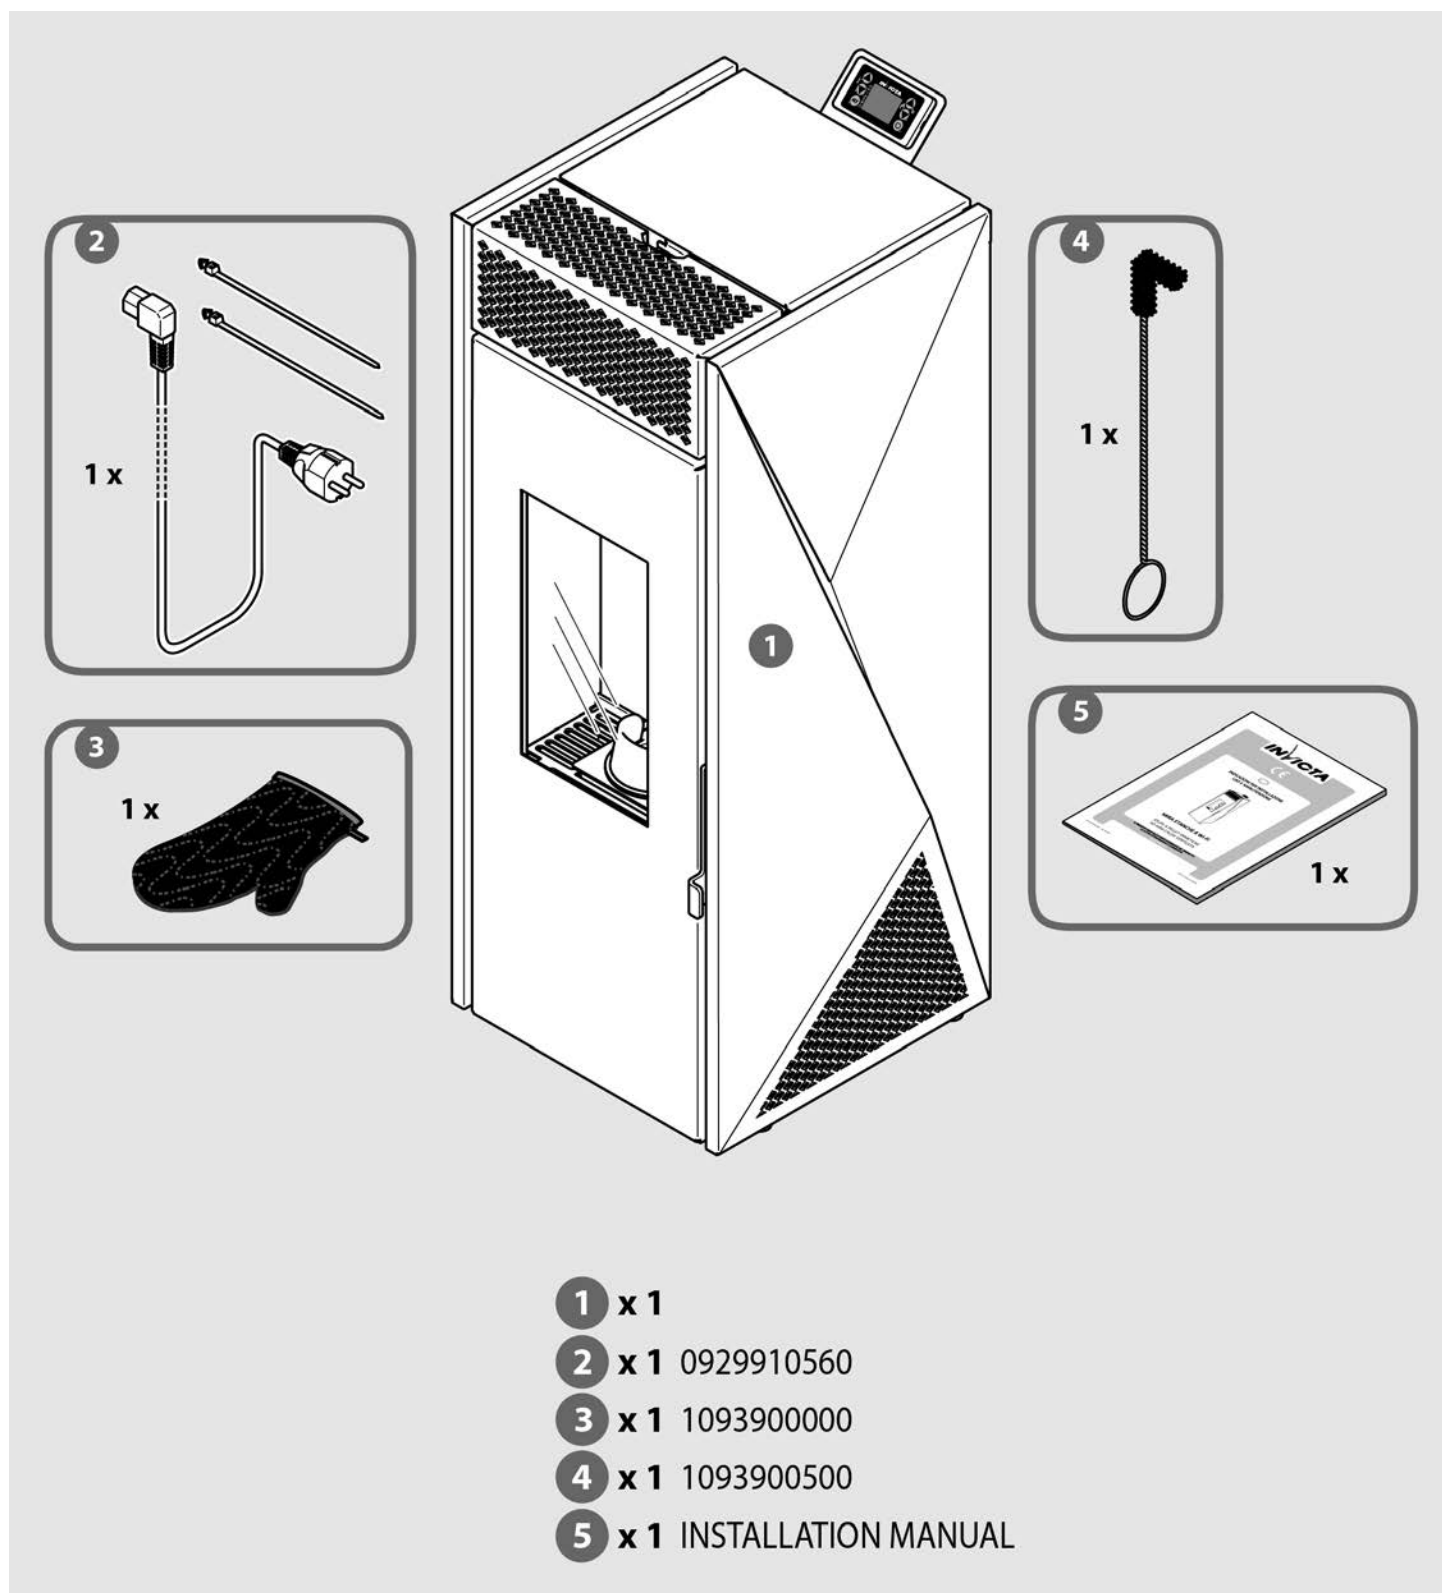

i If the power cable is damaged, it must be replaced with an original one available from the MANUFACTURER or its Technical Assistance Service.

1.9 Functioning principle

This unit has been designed to burn dried, compressed, pelletized wood into a cast-iron container called burn pot where the optimum ratio of combustion air and pellet fuel is always ensured at each heat output that will be selected.

Varying the air supply proportionally to the pellet feed rate ensures the appliance excellent performance at all operating settings and represents an important feature enhancing the quality standards of this appliance. This procedure is handled automatically by the electronic control module: electronic card with microprocessor.

This highly developed module is responsible for controlling and adjusting the appliance functions in accordance with the requirements of the user.

The pellet feed rate, the flue gas flow discharged and the rate of warm air flow emitted into the room are automatically adjusted according to the operating setting selected through the control panel with chrono-thermostat.

In order to utilize to the utmost and avoid to waste the heat produced in the combustion chamber, a heat exchanger with vanes has been introduced in order to get the heat from those areas where the combustion products reach the highest temperature.

An air flow passing through a circuit inside the unit absorbs the heat by natural convection thus cooling the appliance for added protection.

The fan that distributes warm air in the room is the tangential type.

The high-head and -flow centrifugal exhauster ensures high efficiency and power in releasing the combustion products.

2 INSTALLATION

2.1 Packaging dismantling and disposal

Consisting of non-toxic and not noxious materials, the packaging does not need any special disposal procedure; the user is in charge of stocking, disposing of, or recycling the wastes of the packaging according to the regulations in force in the country where the product has been purchased.



WARNING: Keep plastic coverings out of the children's reach as they could represent a danger.

2.2 Installation requirements

The appliance must be installed in a space which allows to operate it and perform routine maintenance works easily. The room chosen for the installation of the appliance must therefore feature:

- Proper environment conditions and permanent outside air source as indicated under section 1.7 "Environment requirements".
- Made with any structural floors of adequate load-bearing capacity (check weight of appliance in data sheet in Section 1.3.2). If the existing construction does not meet this requirement, appropriate measures (such as a load distribution plate) must be taken.
- 230 V~ 50 Hz line voltage.
- Electrical system complying with the directives in force.
- A system of exhaust gases complying with the standards in force aiming at guaranteeing:
 - Adequate draught for the correct and safe appliance operation.
 - Adequate resistance to high temperatures.
 - Adequate resistance to corrosion due to combustion products.
 - Easy access for periodic checks and maintenance.
 - Adequate insulation from inflammable materials.
- The room must also comply also with further standards in force in the country where the appliance is installed.



CAUTION: The installation of the appliance must provide easy access for cleaning the appliance itself, the flue pipes and the chimney.

2.3 Appliance installation



ATTENTION: The installation of the appliance must be carried out by professional installers only. The MANUFACTURER does not authorize the installation of its appliances carried out by private customers.

2.3.1 Appliance Positioning



Before positioning the appliance on the ground it is necessary to unscrew the screws inside the cladding which anchor it to the pallet (to remove the sides of the cladding see section 2.3.7).

After choosing the most suitable location for your appliance, but before setting it in place, determine the center point of the flue gases outlet pipe (review sections 2.3.3 and 2.3.4 to see which most closely matches your situation), and using the measurements shown in the figure 1, make an access hole through the wall.

See section 2.3.2 for making the outside air intake hole.



IMPORTANT: When cutting a hole for the appliance exhaust pipe through a inflammable wall, provide the necessary insulation whose thickness may vary from a minimum of 3 cm up to a maximum of 10 cm. We otherwise recommend the use of lined pipes, which are also excellent for preventing condensation in exterior venting systems.



IMPORTANT: Pressure in the firebox is always negative. There will be a negative pressure in the exhaust pipe when it is connected to an efficient chimney flue as prescribed. The use of pipes and bends with gaskets ensuring airtight connections is recommended.




The installation of your appliance must comply with all prescriptions and recommendations indicated under sections 1.5, 1.6, 1.7 and 2.2, and the electrical plug must be always accessible.


! IMPORTANT: All sections of the exhaust venting system must be removable to allow periodical maintenance (see figure 2).

Note: The schematic shown in the figure n° 2 indicates the necessary configurations for correct appliance operation: height - gradient - inspection access.

The most suitable type of insulation must be determined on a case-by-case basis for each flue gas exhaust venting system, and all external venting systems conduits must be insulated.

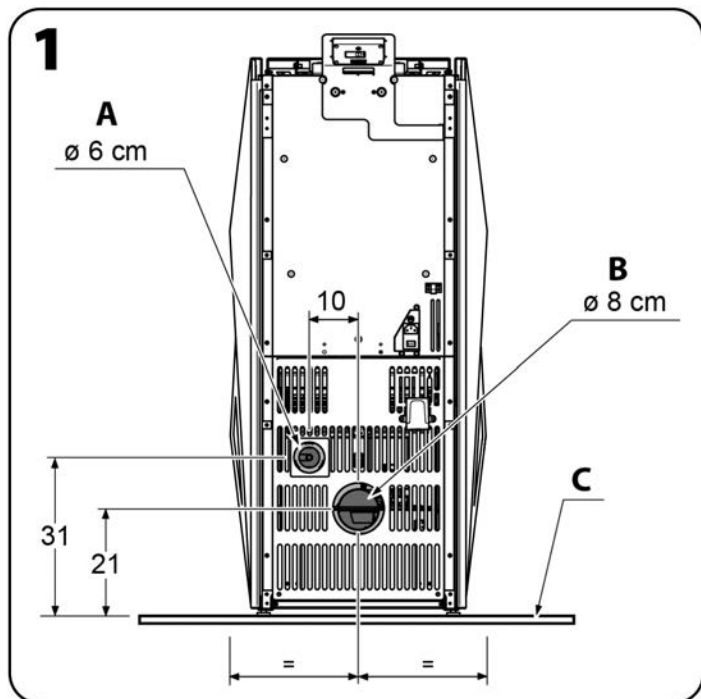


- A. Combustion air inlet
- B. Smoke outlet
- C. Optional non-flammable floor protector

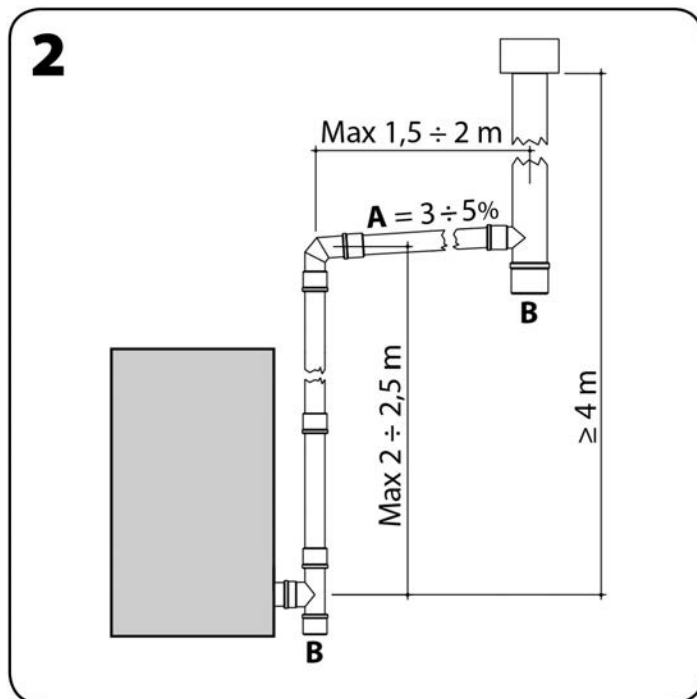

- A. Gradient
- B. Clean-out door

i IMPORTANT: Once the appliance has been positioned in the pre-established place, it can be raised by means of the adjustable feet. To adjust the height of the feet (after removing the sides of the cladding - see section 2.3.7) use a 5 mm hex key, screwing clockwise to raise the appliance and unscrewing counter-clockwise to lower it.

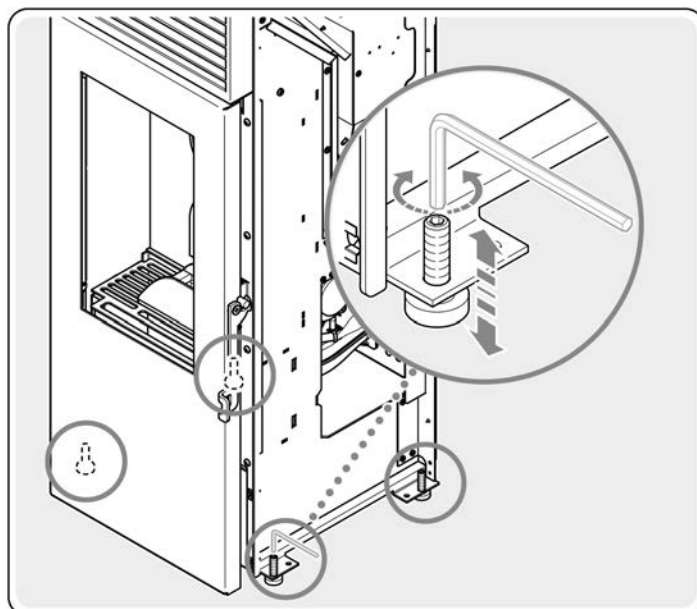

2.3.2 Outside air intake

For health and safety reasons, an outside air supply is recommended. This is also necessary to ensure proper combustion. Cut a hole through an exterior wall for a 100 sq.cm diameter outside air intake (Ø 12 cm hole), protected by both an interior and exterior grate.




i The air intake must not be on the back side of the appliance.

! **IMPORTANT:** In the room where the appliance is installed, make sure that there is an air flow rate of 40 cu.m/hour for combustion use.

i This appliance is airtight and is equipped with a primary air intake from outside; it can therefore be installed in low energy households.

The combustion air intake can also be connected directly from the outside:

1. Directly, using a pipe with diameter of 6 cm and maximum length of 3 meters with a protection grate installed on the outside.
2. Using a coaxial smoke venting system that allows the combustion air to be drawn from the space between the internal smoke outlet pipe and the external wall. The unions are supplied by the manufacturers of these systems. This type of installation can be done up to a maximum height of 5 metres with Ø 80/125 mm or Ø 80/130 mm and up to a height of 10 metres with Ø 100/150, in a vertical configuration.

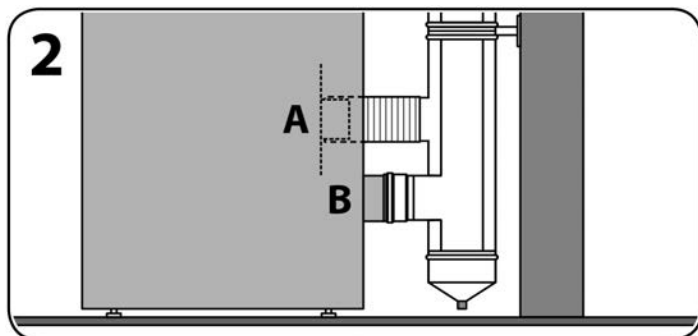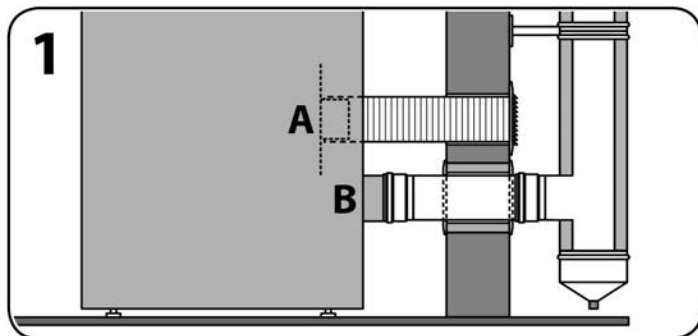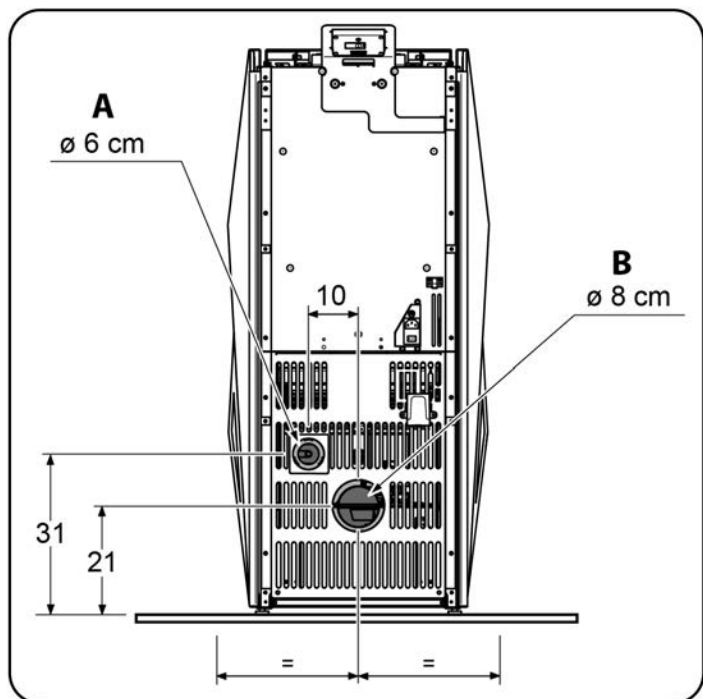

A. Combustion air inlet
B. Smoke outlet

2.3.3 Flue gases venting into a traditional chimney

- The minimum internal dimensions of the chimney flue must be 10x10 cm or 10 cm Ø and must not exceed 20x20 cm or 20 cm Ø; if the existing chimney flue has a larger section or is in poor conditions (i.e. cracked, poor insulation etc.), be sure to refer to a calculation note in order to guarantee that the sizing of the duct allows you to comply with the operating specifications of the appliance and completely safe use.
- Make sure the draught is in Pa, as indicated in the technical chart (see section 1.3.2).
- Provide a clean out door at the bottom of the chimney flue for routine inspection and yearly cleaning.
- The connection of the exhaust pipe to the flue must be sealed or secured with gaskets.
- The chimney flue must be terminated with a wind/rain cap; ensure the wind cap is installed above the top of the roof at a distance "d" varying in accordance with the local standards.



CAUTION: If there has been a fire in the flue it is necessary to turn the appliance off and call the fire department and check whether the chimney stack and flue pipe have been visibly damaged. Make any repairs before any further use of the combustion system.




If the smoke exhauster is out of order or in case of electrical outage, the connection of the exhaust pipe into an exterior vertical vent ensures the correct release of combustion gases.



The draught value indicated among the technical features of the appliance refers to Technical Norms and testing, so as to guarantee the best thermal performances of the appliance (consumption, efficiency, emissions) in conformity with the technical data declared and certified by the Institute in charge of the certification. A higher draught value could provoke malfunctioning, high fuel consumption, overheating of the appliance body and cause annoying noises in the firebox.



IMPORTANT (FOR THE TECHNICIAN): When sizing the flues of wood pellet burning appliances using dedicated software applications, you can use a pressure value of 0 Pascal as a reference.

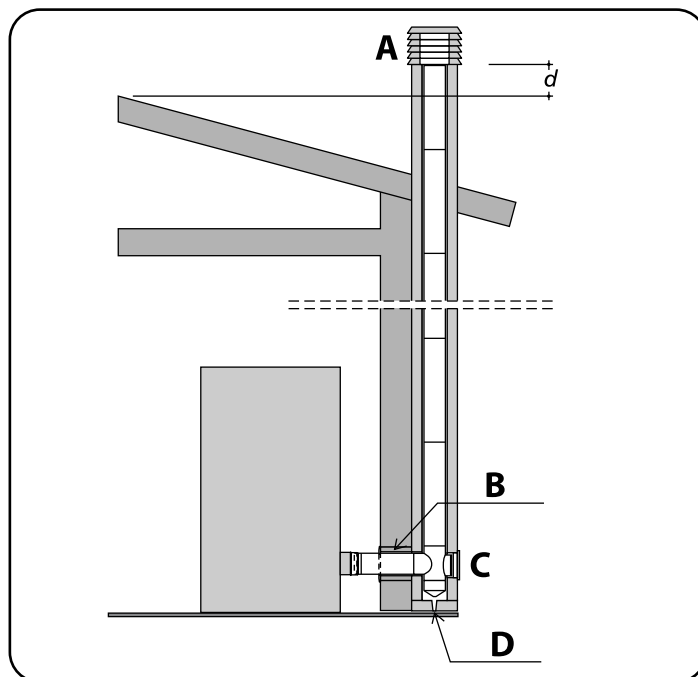

- A. CHIMNEY WIND CAP
- B. INSULATION
- C. CLEAN-OUT DOOR
- D. CONDENSATE DRAINAGE SYSTEM

2.3.4 Smoke outlet into exterior vertical vent (stainless steel lined type)

- The internal dimensions of the exterior vertical vent may vary from a min. 10 cm up to a max. 20 cm section.
- Make sure the draught is in Pa, as indicated in the technical chart (see section 1.3.2).
- Only double-wall lined pipes in stainless steel must be used adequately and anchored to the building.
- Provide a clean out door at the bottom of the exterior vertical vent for routine inspection and yearly cleaning.
- The chimney flue must be terminated with a wind/rain cap; ensure the wind cap is installed above the top of the roof at a distance "d" varying in accordance with the local standards.



CAUTION: If there has been a fire in the flue it is necessary to turn the appliance off and call the fire department and check whether the chimney stack and flue pipe have been visibly damaged. Make any repairs before any further use of the combustion system.




If the smoke exhauster is out of order or in case of electrical outage, the connection of the exhaust pipe into an exterior vertical vent ensures the correct release of combustion gases.



The draught value indicated among the technical features of the appliance refers to Technical Norms and testing, so as to guarantee the best thermal performances of the appliance (consumption, efficiency, emissions) in conformity with the technical data declared and certified by the Institute in charge of the certification. A higher draught value could provoke malfunctioning, high fuel consumption, overheating of the appliance body and cause annoying noises in the firebox.



IMPORTANT (FOR THE TECHNICIAN): When sizing the flues of wood pellet burning appliances using dedicated software applications, you can use a pressure value of 0 Pascal as a reference.

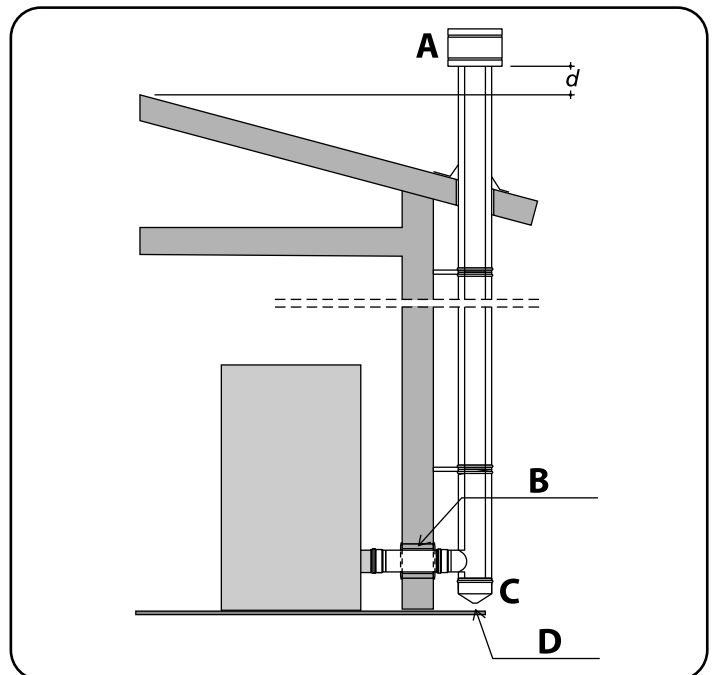

A. CHIMNEY WIND CAP
B. INSULATION
C. CLEAN-OUT DOOR
D. CONDENSATE DRAINAGE SYSTEM

2.3.5 Electrical connection

To be done after installing the cladding.

Insert its power plug into an appropriate wall socket.

- i** **Press the on/off switch only when you want to operate the appliance.**
Pressing the on/off switch will give power to the appliance.
The appliance will start in accordance with the operation mode selected (see section 3.3.1) or possibly in accordance with the pre-set programmes (see section 3.3.5).
- i** **Make sure the hopper is filled with enough pellets for the operating time that is set.**

2.3.6 Positioning the room temperature sensor

To be done after installing the cladding.

Place the room temperature sensor in a place where the average room temperature can be detected (we recommend not to install the sensor near windows or doors in order to avoid wrong temperature readings).

- i** **The correct positioning of the room temperature sensor ensures the correct operation of the appliance.**

2.3.7 Disassembling the cladding

If it should be necessary, for a maintenance intervention, to access the electrical and electronic parts, operate according to the following instructions to remove the cladding elements.




ATTENTION: To be on the safe side, wear work gloves.

1. Carefully remove the cover.
2. Unscrew the 2 rear screws holding the sides of the cladding.
3. Carefully remove the sides.



In the end correctly assemble the component parts removed in reversed sequence.

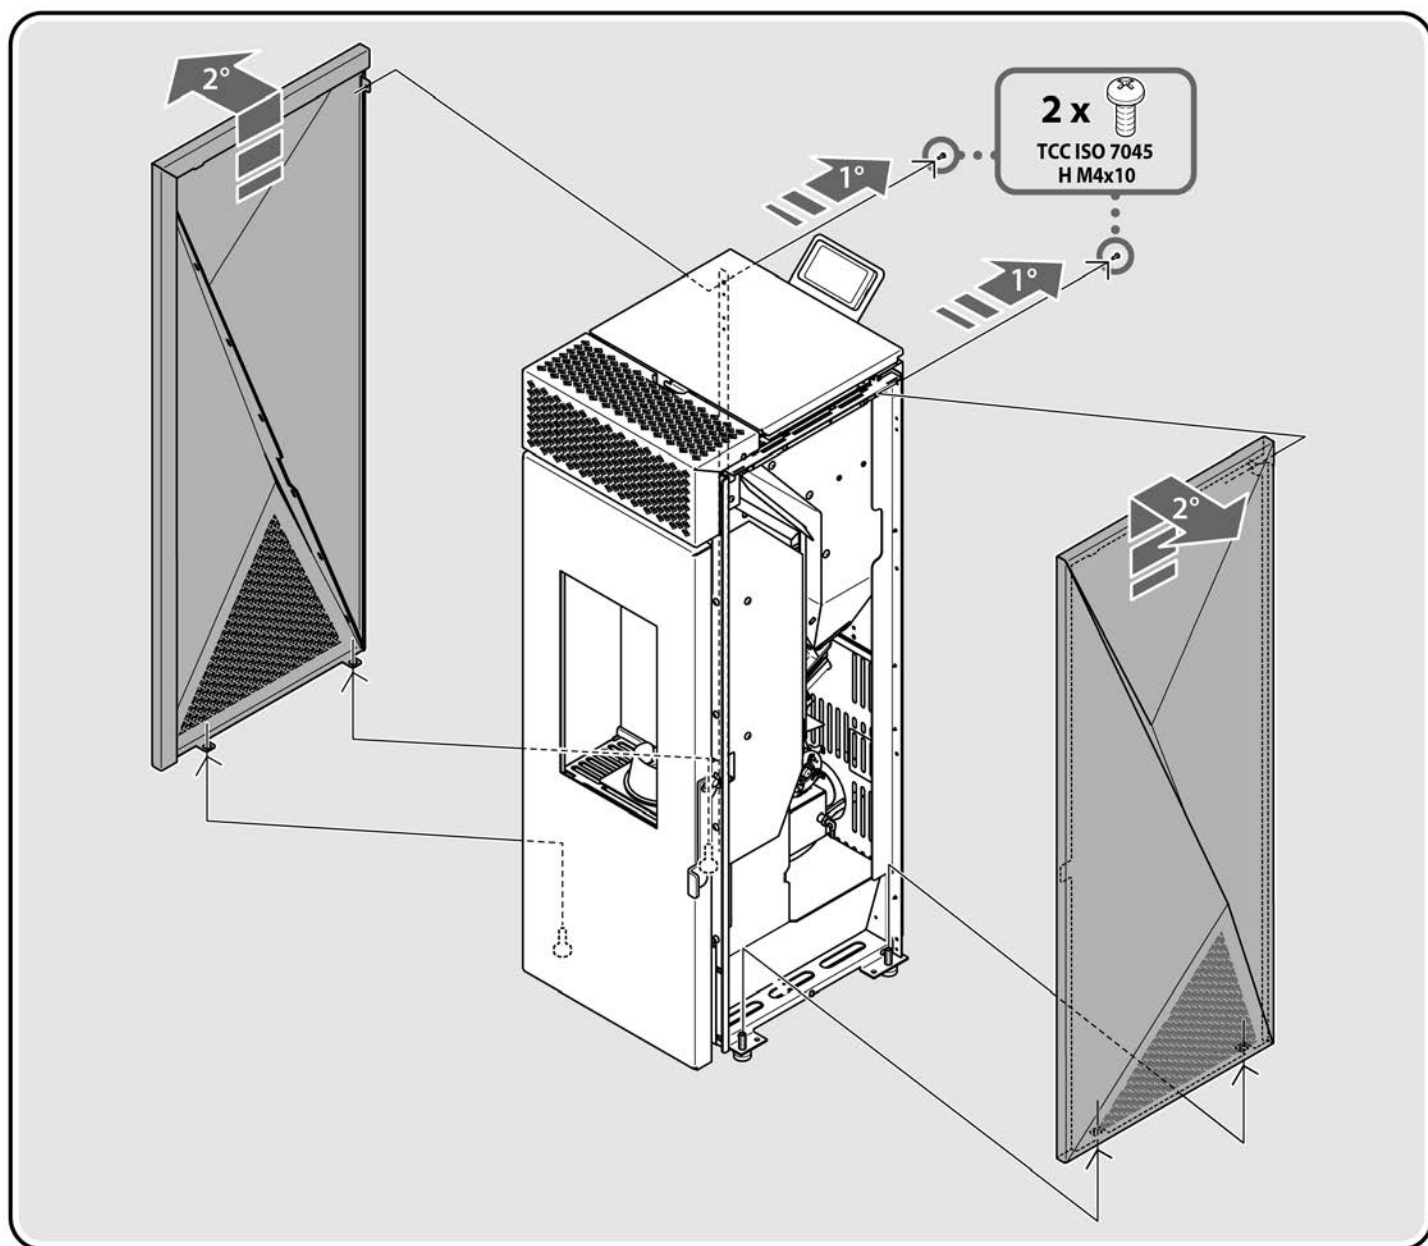

2.4 Wi-Fi module - WiNET

2.4.1 Technical feature

The Wi-Fi module is a device that must be connected to the electronic board of the appliance and through an application allows you to remotely monitor and manage the pellet appliances via a tablet/smartphone (Android or iOS) using an internet connection.




ATTENTION: Before using the Wi-Fi module carefully read the directions for installation, use and maintenance of the appliance.

The paragraph's goal is informing the user with the general functionality of the product.

The main information will be on the connectivity, focusing on the Wi-Fi module configurations.

(Point to Point Connection or domestic Wi-Fi network).

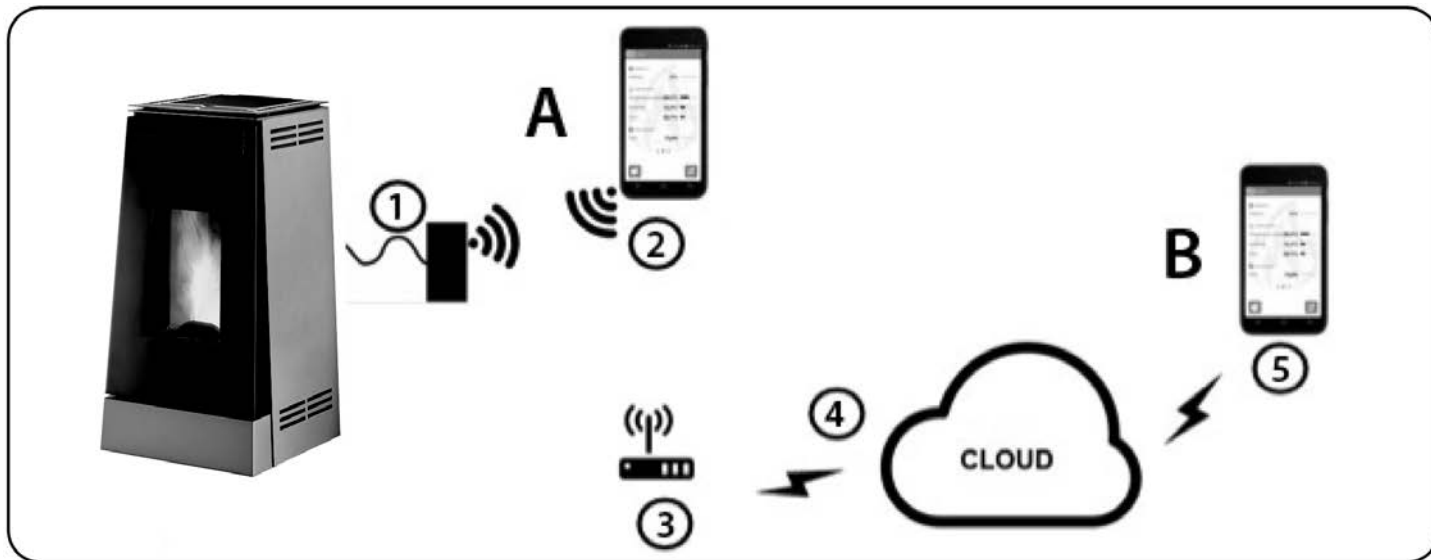

A. POINT TO POINT CONNECTION

B. WI-FI DOMESTIC NETWORK

Point to Point Connection is a direct data connection linking two devices for private data services (Wi-Fi module [1] and a Smartphone/Tablet [2]).

A point to point connection is a closed network data transport service, which does not traverse the public Internet (without need for a Wi-Fi router or broadband connection).

Meanwhile in the domestic Wi-Fi network configuration, the Wi-Fi module will need a standard router or broadband connection on site [3] to traverse the public Internet.

The remote communication is implemented through a "relay server" [4] that connects one or more smartphones or tablets [5] to the Wi-Fi module [1] and vice versa.

The Wi-Fi module is a Wi-Fi interface module that, once connected to the electronic board of the appliance, allows it to be monitored directly from an App, both from home and from a remote location.

2.4.2 User instruction manual



Scan de QR code to download the device setup manual.

3 OPERATION

3.1 Pre- and first-lighting instructions

Before lighting the appliance for the first time the following must be done:

- Remove the sticker from the glass and any adhesive marks if necessary.
- Ensure that all safety requirements are met (see sections 1.5 and 1.6).
- Electrical connection: After verifying that the line voltage is correct (230 V~ 50 Hz), flip the main switch located on the back panel of the appliance to the "ON" position.
- Check that the control panel display lights up, which indicates that appliance is powered.
- make sure the hopper is filled with enough fuel for the desired service time.

i The fuel quality standards must comply with what prescribed under section 1.4.

! CAUTION: Children must be supervised by an adult in order to prevent them from touching the appliance hot parts or modifying its functions.


i The metal component parts of the appliance are coated with a special high temperature paint that will reticulate, chemically stabilize and become fully heat resistant after the first few lightings. During this chemical reaction, the paint will smell bad and release vapours, thus it is recommended that the room be properly aerated. When this process is finished, no more bad smell and vapours will be released during the appliance normal operation.

3.2 Pellet loading

Open the lid of the loading port and fill the hopper with pellets of $6 \pm 1,0$ mm $\varnothing$ with length $3,15 \leq L \leq 40,0$ mm (EN 17225-2 – Category A1).

! **WARNING:** While the appliance is working, the lid of the pellet hopper can only be left open for 30 seconds at the most; if it is left open for longer than this time, the safety device trips with relevant acoustic alarm signal, which activates the appliance shutdown procedure (see section 3.3.6).

! **CAUTION:** Do not remove the protection grate that is mounted inside the hopper.

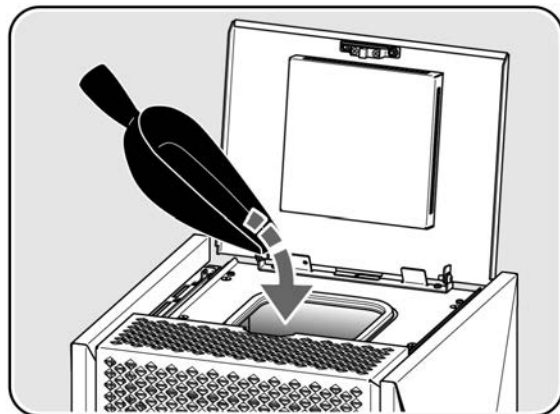

! **ATTENTION:** The pellet that should accidentally fall outside the reservoir while loading it could come into contact with very hot parts of the appliance with the resulting risk of a fire. It is therefore necessary to use a specific shovel so that the pellet bag does not burden on the reservoir and/or does not touch the hot parts of the appliance. The pellet that should fall out of the reservoir and finish in the areas between the reservoir and the cladding must be immediately removed.

! **IMPORTANT:** To ensure correct functioning of the appliance always close the lid of the hopper after refilling.

i Check the quantity of pellets in the hopper from time to time, and refill promptly whenever necessary in order to avoid setting off an appliance alarm due to low fuel level (the sustained sound of the acoustic alarm may cause a nuisance until the user has a chance to reset the system).

3.3 Control panel



CONTROL PANEL

Control panel icons

The appliance's control panel is equipped with a lit display and with six icons as described below:



[P1] = [AMBIENT TEMPERATURE SET INCREASE] on the left side of the control panel.



[P2] = [AMBIENT TEMPERATURE SET DECREASE] on the left side of the control panel.



[P3] = [MENU SET] on the left side of the control panel.



[P6] = [POWER SET INCREASE] on the right side of the control panel.



[P5] = [POWER SET DECREASE] on the right side of the control panel.



[P4] = [ON/OFF] on the right side of the control panel.

Activation indicators

The appliance's control panel also has seven icons on the left side of the display, as illustrated below. During operation of the appliance, the corresponding activation indicators adjacent to these icons will light up.



thermostat activation icon.



ignition resistance icon.



screw auger icon.



smoke exhauster icon.



fan icon.



icon not used.



alarms icon.

3.3.1 Ignition


i Before switching on the appliance check the correct positioning of the internal movable parts of the combustion chamber.

Before operating your appliance again, clean the ceramic glass door if needed (see section 4.1.2), remove any residual combustion products from the burn pot, clean the firebox, and vacuum up the ash residues in the burn pot and ash pan (see section 4.1.3). If the appliance has not been used for a long time, remove any pellets that may still be in the fuel hopper because they could have lost their original properties which ensure a good combustion. Also vacuum any pellet sawdust from the hopper.

! **IMPORTANT: This last procedure must be carried out using an appropriate vacuum cleaner.**
Never remove the protective grate from the top of the pellet hopper for any reason, not even temporarily.

Activate the appliance, setting the switch on the rear to "1". Activation is confirmed by the control panel switching on, which goes to the main screen ([OFF] appears on the display).

The time, ambient temperature, set operating power and the appliance's state of operation are viewed on the display.

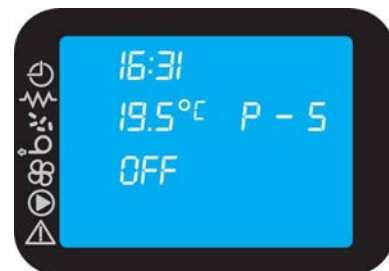


i In the event of the first start-up or after an alarm due to pellets running out: remember that the fuel feed screw auger is empty, therefore adequate time is needed for it to fill and to fuel the burner. To do this, use the [LOAD INITIAL] function on the menu.

To switch the appliance on, long press the button [P4]. Switching on is indicated on the display with the word [START].



Any faults during the light up phase are indicated on the display and the appliance will go into alarm condition (see section 3.3.6). Once ignition has started, the following operating conditions occur: [AWAITING PREHEATING], [LOADING PELLETS], [AWAITING FLAME] and [FIRE].

After the appliance has reached adequate fuel development and sufficient heating is maintained for a suitable time, it enters the the work condition which is the normal operating condition. The display indicates the [WORK] condition and the air exchanger fan switches on.

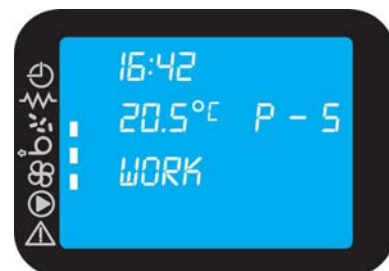

At intervals adjusted by the electronic board, the appliance goes into "cleaning" operating mode in order to keep the burner clean and efficient, indicating [CLEANING FIRE-POT] on the display.



IMPORTANT: If ignition fails, the appliance goes into the "ignition failed" alarm condition and the display will show the message [NO LIGHTING].

Before carrying out a second ignition attempt, completely empty the burner of the fuel that accumulated during the first attempt.



WARNING In the following cases always remove any pellets that may still be in the burn pot before restarting the appliance:

- After every failed ignition.
- After selecting the switching off mode before the ignition cycle is completed.
- On re-ignition after switching off for lack of fuel.




ATTENTION: For safety reasons never put these pellets in the fuel hopper.

3.3.2 Extinguishing

To switch off the appliance, simply long press the button [P4]. The message [FINAL CLEANING] will appear on the display.

The screw auger will stop.

The air exchange fan and the smoke exhauster will remain on until the appliance has completely cooled down. After a preset period, if the appliance stays cold, it switches off and the message [OFF] appears on the display.

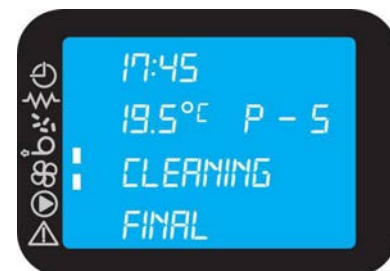

CAUTION: Never switch off the appliance by disconnecting the power plug.

This may adversely affect the structural integrity of the appliance and cause failures by the following lighting.

3.3.3 Maximum operating power set adjustment

The appliance has 5 operating power settings and they are automatically managed by the appliance. From the main screen, you can change the maximum operating power by pressing the buttons [P5] and [P6].

To increase the set power, press [P6] again, whereas to decrease it, press [P5]. The set power is indicated on the display.

To exit the set menu, wait 5 seconds without carrying out any operations on the control panel or press [P4]. The modifiable sets power go from 2 to 5.



CAUTION: Never switch off the appliance by disconnecting the power plug.

This may adversely affect the structural integrity of the appliance and cause failures by the following lighting.

3.3.4 Ambient temperature set adjustment

From the main screen, you can change the set ambient temperature by simply pressing the buttons [P1] and [P2].


The display indicates the set ambient temperature [SET AMBIENT TEMP]

Therefore, by pressing the buttons [P2] (decrease) and [P1] (increase), you can change the value. After about 5 seconds, the value is stored and the display returns to the main screen, or to exit, press the button [P4].



When the ambient temperature has reached the set value, the appliance power will automatically switch to the minimum value. In these conditions, the display indicates the message [WORK MODULAT-].

If the ambient temperature drops below the set temperature, the appliance resumes at the previously set power.

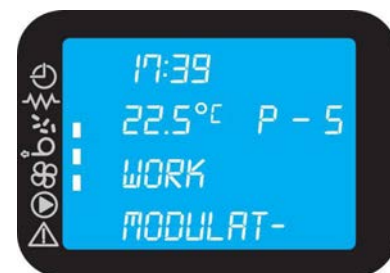


MANUAL MODE:

If the ambient temperature is set above 40°C, the display will indicate [Man] and the appliance will switch to manual mode, maintaining the set operating power without switching to minimum no matter what ambient temperature is reached.

THERMOSTAT MODE:

If the ambient temperature is set below 6°C, the display will indicate [therm] and the appliance will switch to thermostat mode. This mode allows the appliance to ignite or extinguish using a thermostat or an external switch connected to the specific terminal block on the appliance's electronic board (see section 5.2).

After activating thermostat mode, you can check the ignition request from the external thermostat by viewing the specific activation indicator on the upper left of the display.

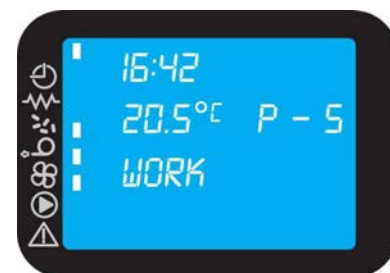

STAND BY:

The standby function extinguishes the appliance if the ambient temperature is higher than the set temperature by 3°C for more than 3 minutes. The display will indicate [WAIT RESTART] (awaiting re-ignition).

In this phase, the appliance stops the screw auger. The air exchanger fan and the smoke exhauster stay on until the appliance has cooled down. The appliance re-ignites, once cooling has been completed, when the ambient temperature drops 1°C below the set temperature.



CAUTION: Never switch off the appliance by disconnecting the power plug.

This may adversely affect the structural integrity of the appliance and cause failures by the following lighting.

3.3.5 Menu

To access the menu, press the button [P3]. The display will indicate [MENU 02 SET CLOCK].

The menu is subdivided into various items and submenu levels that permit access to the appliance's settings and programming.

To scroll through the menus and submenus, press the buttons [P5] or [P6].

To confirm the desired menu selection, press the button [P3] and then press [P1] or [P2] to change the values.


To exit and return to the previous screen, press the button [P4].

Menu 01 - (NOT PRESENT ON THIS APPLIANCE)

Menu 02 - SET CLOCK:

Confirm the menu choice with button [P3].

Set the current date and time To enter the menu, press the button [P3]. Select the desired day of the week by pressing [P1] or [P2] and confirm by pressing button [P3]. This is followed by setting of the hour, minutes, day of the month, the month and the year by pressing the buttons [P1] or [P2] and confirm by pressing button [P4].

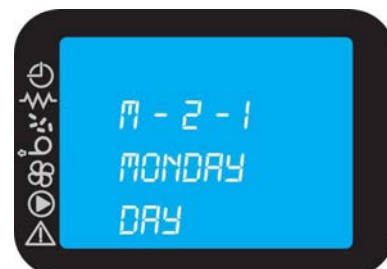


Menu 03 - SET PROGRAMMABLE THERMOSTAT:

Confirm the menu choice with button [P3].

These menus permit you to set all the programmable thermostat functions. To enter the menu, press the button [P3] and then press [P5] or [P6] to select the desired submenu. Confirm with the button [P3].


To exit and return to the previous screen, press the button [P4].

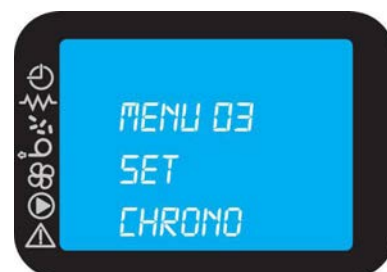

Submenu 3 - 1 ENABLE PROGRAMMABLE THERMOSTAT:

Confirm the menu choice with button [P3].

This allows you to enable and disable the programmable thermostat. Press [P1] to enable "on", [P2] to disable "off" and confirm with the button [P4]. Enabling the programmable thermostat is confirmed by a programmable thermostat icon that turns on if at least one of the three programmes described below is activated (daily, weekly or weekend programme).

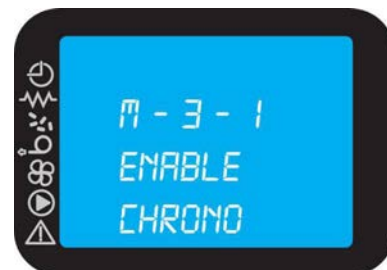

Submenu 3 - 2 SET DAY:

Confirm the menu choice with button [P3].

This allows you to enable and edit the programmable thermostat's daily programme. Press [P1] to enable "on" or [P2] to disable "off". To confirm and move to the next screen, press the button [P5] and to exit press the button [P4].



The appliance has 2 daily programs that allow it to be switched on twice and switched off twice per day. The maximum operating power and the ambient temperature can also be set for each programmed time-band.

- **Start 1 day**

To set the first ignition time (start 1) for the appliance, press [P1] or [P2]. To ignore the first ignition, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Stop 1 day**

To set the first extinguishing time (stop 1) for the appliance, press [P1] or [P2]. To ignore the first extinguishing, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Power 1 day**

To set the maximum operating power for the first programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Set 1 day**

To set the ambient temperature for the first programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Start 2 day**

To set the second ignition time (start 2) for the appliance, press [P1] or [P2]. To ignore the second ignition, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Stop 2 day**

To set the second extinguishing time (stop 2) for the appliance, press [P1] or [P2]. To ignore the second extinguishing, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Power 2 day**


To set the maximum operating power for the first programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Set 2 day**

To set the ambient temperature for the first programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

Enabling the daily programme is confirmed by the specific activation indicator that turns on at the top of the display.

Ignition of the appliance through the daily programme takes place only if the programmable thermostat is enabled at the same time from submenu 3 - 1 - 1.

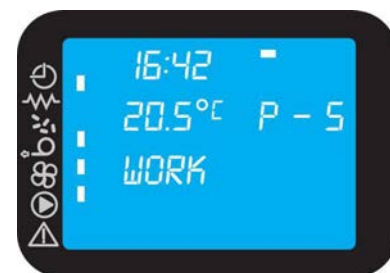**Submenu 3 - 3 WEEKLY PROGRAMME:**

Confirm the menu choice with button [P3].

This allows you to enable and edit the programmable thermostat's weekly programme. Press [P1] to enable "on" or [P2] to disable "off". To confirm and move to the next screen, press the button [P5].



The appliance has 4 weekly programs that allow it to be switched on 4 times and switched off 4 times per day. The maximum operating power and the ambient temperature can also be set for each programmed time-band. Each program offers 11 options in rotation for setting/enabling, according to the following table.

program 1	program 2	program 3	program 4
Start prog 1	Start prog 2	Start prog 3	Start prog 4
Stop prog 1	Stop prog 2	Stop prog 3	Stop prog 4
Power 1 WEEK	Power 2 WEEK	Power 3 WEEK	Power 4 WEEK
Set 1 WEEK	Set 2 WEEK	Set 3 WEEK	Set 4 WEEK
Monday prog 1	Monday prog 2	Monday prog 3	Monday prog 4
Tuesday prog 1	Tuesday prog 2	Tuesday prog 3	Tuesday prog 4
Wednesday prog 1	Wednesday prog 2	Wednesday prog 3	Wednesday prog 4
Thursday prog 1	Thursday prog 2	Thursday prog 3	Thursday prog 4
Friday prog 1	Friday prog 2	Friday prog 3	Friday prog 4
Saturday prog 1	Saturday prog 2	Saturday prog 3	Saturday prog 4
Sunday prog 1	Sunday prog 2	Sunday prog 3	Sunday prog 4
<i>continues program 2</i>	<i>continues program 3</i>	<i>continues program 4</i>	<i>continues program 1</i>

- **Start program 1/2/3/4**

To set the first/second/third/fourth ignition time (start prog 1/2/3/4) for the appliance, press [P1] or [P2]. To ignore the first/second/third/fourth ignition, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Stop program 1/2/3/4**

To set the first/second/third/fourth extinguishing time (stop 1/2/3/4) for the appliance, press [P1] or [P2]. To ignore the first/second/third/fourth extinguishing, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Power 1 / 2 / 3 / 4 WEEK**

To set the maximum operating power for the programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Set 1 / 2 / 3 / 4 WEEK**

To set the ambient temperature for the programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Monday prog 1/2/3/4**

To enable this programme on Monday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

- **Tuesday prog 1/2/3/4**

To enable this programme on Tuesday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

- **Wednesday prog 1/2/3/4**

To enable this programme on Wednesday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

- **Thursday prog 1/2/3/4**

To enable this programme on Thursday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

- **Friday prog 1/2/3/4**

To enable this programme on Friday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

- **Saturday prog 1/2/3/4**


To enable this programme on Saturday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

- **Sunday prog 1/2/3/4**

To enable this programme on Sunday, press [P1] "ON". To disable it, press [P2] "OFF". Confirm and move to the next screen with the button [P5].

Enabling the weekly programme is confirmed by the specific activation indicator that turns on at the top of the display.

Ignition of the appliance through the weekly programme takes place only if the programmable thermostat is enabled at the same time from submenu 3 – 1 – 1.

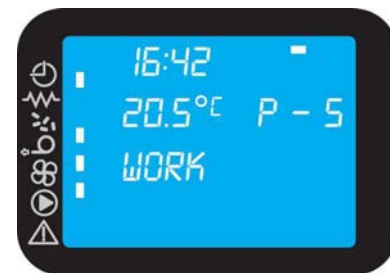

Submenu 3 - 4 WEEKEND PROGRAMME:

Confirm the menu choice with button [P3].

This allows you to enable and edit the programmable thermostat's weekend (Saturday and Sunday) programme. Press [P1] to enable "on" or [P2] to disable "off". To confirm and move to the next screen, press the button [P5].



The appliance has 2 weekend programs that allow it to be switched on twice and switched off twice per day. The maximum operating power and the ambient temperature can also be set for each programmed time-band.

- **Start 1 WEEK - END**

To set the first ignition time (start 1) for the appliance, press [P1] or [P2]. To ignore the first ignition, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Stop 1 WEEK - END**

To set the first extinguishing time (stop 1) for the appliance, press [P1] or [P2]. To ignore the first extinguishing, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Power 1 WEEK - END**

To set the maximum operating power for the first programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Set 1 WEEK - END**

To set the ambient temperature for the first programmed time-band, press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Start 2 WEEK - END**

To set the second ignition time (start 2) for the appliance, press [P1] or [P2]. To ignore the second ignition, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Stop 2 WEEK - END**

To set the second extinguishing time (stop 2) for the appliance, press [P1] or [P2]. To ignore the second extinguishing, set the time to "OFF", confirm and move on to the next screen with the button [P5].

- **Power 2 WEEK - END**


To set the maximum operating power for the second programmed time-band press [P1] or [P2], confirm and move on to the next screen with the button [P5].

- **Set 2 WEEK - END**

To set the ambient temperature for the second programmed time-band press [P1] or [P2], confirm and move on to the next screen with the button [P5].

Enabling the weekend programme is confirmed by the specific activation indicator that turns on at the top of the display.

Ignition of the appliance through the weekend programme takes place only if the programmable thermostat is enabled at the same time from submenu 3 – 1 – 1.

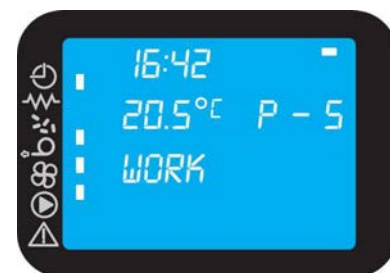

Menu 04 - SELECT LANGUAGE:


Confirm the menu choice with button [P3].

This allows you to choose the language from those available. Scroll through the languages using the buttons [P1] or [P2], confirm and return to the previous screen using the button [P4].

**Menu 05 - STANDBY MODE:**


Confirm the menu choice with button [P3].

This allows you to disable the standby function. To enable or disable, press the buttons [P1] or [P2]. To confirm and return to the previous screen, press the button [P4].

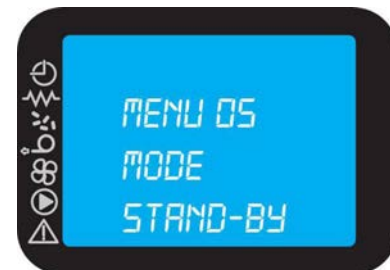**Menu 06 - BUZZER MODE:**

Confirm the menu choice with button [P3].


This allows the acoustic signal buzzer to be enabled or disabled during alarm conditions. To enable or disable, press the buttons [P1] or [P2]. To exit and return to the previous screen, press the button [P4].

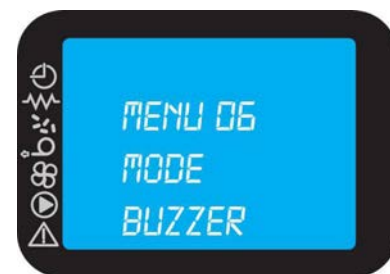**Menu 07 - INITIAL LOADING:**

Confirm the menu choice with button [P3].

This function, available only when the appliance is in [OFF] condition, allows the screw auger to be loaded at the first start-up when the fuel reservoir is empty or after a no-pellets alarm event.

After selecting menu 07, press the button [P1]. The screw auger activates and remains in operation until the time indicated on the display runs out or until the button [P4] is pressed.

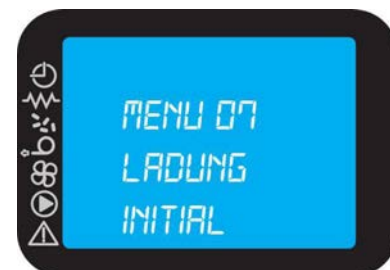**Menu 08 - STOVE STATUS:**

This function is only for installers or expert personnel and it allows the status of a few variables to be viewed during operation of the appliance.




Menu 09 - PELLET TYPE:

Confirm the menu choice with button [P3].

This function provides the facility to view and edit the combustion parameters associated with the pellet load.



ATTENTION: Loading the pellet through the feeding system on the appliance is influenced by the characteristics of the pellet itself. Introducing different supplies of pellets you can find loading differences that can reach 20/25%, which translate into variations in thermal power introduced (see paragraph 1.4).

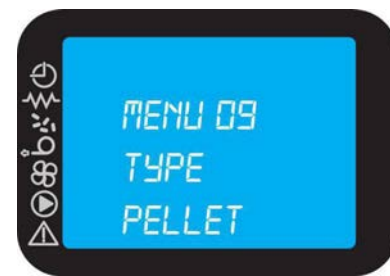

At the first ignition check for at least 6 continuous hours that the combustion meets the following requirements:

- there must not be any tendency to fuel build up in the burn pot given to an excess of fuel or lack of draught.
- There must not be any tendency to flame extinguishing for lack of fuel or for excessive draught.

Since the proper functioning of the appliance depends on the environmental conditions and especially on the draught, on the connection to the chimney flue and on the type of pellet used, should the user notice one of the above tendencies, after having checked that the stove is perfectly cleaned (see paragraphs 4.1.3, 4.2.1 and eventually 4.2.2), a different set of parameters among those available and set by the factory could be necessary.

There are 19 parameters organised according to the pellet density and specific gravity.

Choose the most appropriate parameter to guarantee good combustion, according to the following indications:

- If the pellets tend to build up in the burn pot, choose a parameter lower than the current one, monitor combustion for at least one hour, and, if necessary, reduce the parameter setting until the combustion requirements illustrated above are met.
- If there is a tendency for the flame to extinguish, choose a higher parameter than the current one, monitor combustion for at least one hour, and, if necessary, increase the parameter setting until the combustion requirements illustrated above are met.

Use buttons [P1] and [P2] to adjust the pellet load percentage from a maximum value of +7 to a minimum of -7. Each change alters the pellet load of all 5 power settings of the unit. (Parameter factory setting = 0).



ATTENTION: It is recommended to carry out the combustion calibration correctly because in case of flame extinguishment, unburnt pellet could distillate in the burn pot and lead to its explosion in the combustion chamber.

Summary parameter table

Parameters to be selected when there is a tendency to
FLAME EXTINGUISHING

-7	-6	-5	-4	-3	-2	-1	0	1	2	3	4	5	6	7
----	----	----	----	----	----	----	---	---	---	---	---	---	---	---

Parameters to be selected when there is a tendency to
PELLET BUILD UP

Menu 10 - PERCENTAGE VENTILATOR:

Confirm the menu choice with button [P3].

This allows the ambient air fan rotation speed percentage to be set at the appliance's maximum operating power: factory setting 100%.

To modify the percentage, press [P1] or [P2], confirm and move on to the previous screen with the button [P4].



Menu 11 - DELAY IGNITION:

Confirm the menu choice with button [P3].

Available only when the appliance is in the [OFF] condition, this function allows ignition to be delayed.

To set the delayed ignition time, press [P1] or [P2], confirm and move on to the previous screen with the button [P4].

**Menu 12 - DELAY OFF:**


Confirm the menu choice with button [P3].

Available only when the appliance is in the [WORK] condition, this function allows delayed shut-down to be programmed.

To set the delayed shut-down time, press [P1] or [P2], confirm and move on to the previous screen with the button [P4].

**Menu 13 - TECHNICAL CALIBRATION:**

CAUTION: Access to this menu, allowed by inserting an access key, is for installers or expert personnel, since the parameters shown, if modified, may render the product unsuitable for application in use.


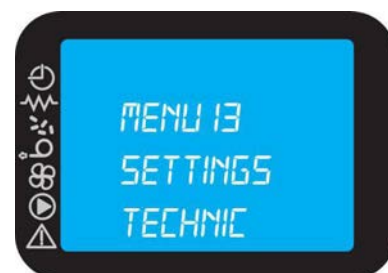
**Menu 14 - SOFT MODE:**

Confirm the menu choice with button [P3].

If activated, this function disables the air fan operation when the appliance is operating at minimum power.

To enable or disable press [P1] or [P2], confirm and move on to the previous screen with the button [P4].

Enabling of SOFT MODE is confirmed by the lighting up of the specific activation indicator at the top of the display.

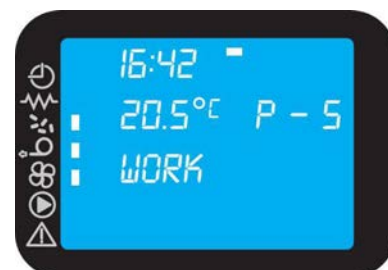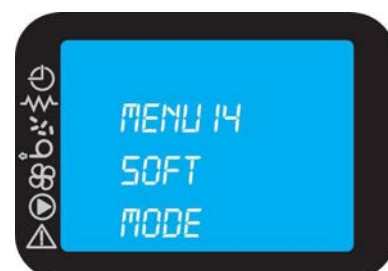

Menu 15 - BACK LIGHT:

Confirm the menu choice with button [P3].

This function enables to modify the display backlight.

To keep the backlight on at the highest level of brightness, set at [Off].

To keep the highest brightness of the backlight while it turns off after 30 seconds, set at [Mas].

To have a medium brightness of the backlight while it turns off after 30 seconds set at [Med].

To have a minimum brightness of the backlight while it turns off after 30 seconds, set at [Min].

To modify the backlight use the buttons [P1] or [P2], to confirm and go back to the previous screen press [P4].

**Menu 16 - TYPE KCC CONTROL:**


This function is used to activate or deactivated the KCC (kit control of combustion).

Confirm the menu choice with button [P3].

On the display, you will see [on] if activate and [off] if deactivated.

To activate or deactivate the KCC, please use the touch [P1] or [P2]. To validate and return at the precedent menu, use the touch [P4].

To modify the backlight use the buttons [P1] or [P2], to confirm and go back to the previous screen press [P4].

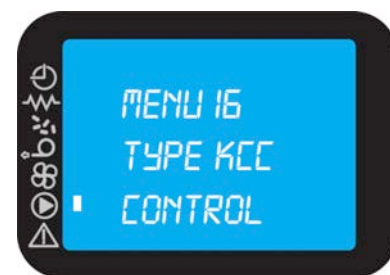**Menu 17 - ADJ KCC:**

This function is used to tare the KCC (kit control of combustion).


Confirm the menu choice with button [P3].

On the display, you will see [off]. If you want launch the tare, please use [P1], then you could read on the display during few seconds [ADJ KCC – KO --].

When the tare will finish, you will return automatically at the precedent menu.



WARNING: please, we recommend you to be careful of the tare of the KCC. We remind you that to launch in the right way the tare, you need to have the wood-burner turned off, cold, with the door opened.

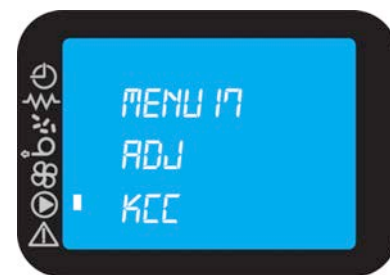**3.3.6 Alarm signals**

CAUTION: Always remove any pellets that may still be in the burn pot before restarting the appliance, when an alarm causes the turning off of the appliance.

If an operational fault should occur, the appliance intervenes and signals the anomaly, switching on the alarms indicator icon on the display and emitting acoustic signals.



Any alarm situation causes the appliance to switch off immediately.

The alarm condition is reached after a time of 30 seconds except for the BLACK OUT alarm and it can be reset by long pressing the button [P4]. Each time an alarm is reset, the appliance initiates a shut-down phase for safety reasons. In the alarm phase, an alarm icon is always active on the display and, if enabled, the buzzer sounds intermittently. If the alarm is not reset, the appliance initiates shut-down anyway, leaving the alarm message on the display.



IMPORTANT: After each alarm event, you must always wait for the appliance to cool down completely, after which you may proceed with disconnecting it, setting the switch on the rear to "0" and, if maintenance is required, disconnecting the electrical plug. After carrying out the indications for the respective solutions, you may proceed with start-up, setting the switch on the back to "1" and after having waited for the appliance to return to the [OFF] condition.

An alarm situation can be caused by a breakdown on the appliance; in this case, if the appliance does not start up correctly after the respective instructions for the solutions have been carried out, the services of a qualified technician are necessary to reactivate the appliance and to check the causes that triggered the alarm.

BLACKOUT ALARM:

While the appliance is working, there may be an electric power failure. On restarting, if the power failure period is less than 30 seconds, the appliance starts up again in WORK mode; otherwise the alarm intervenes.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

SMOKE SENSOR ALARM:

This occurs if the smoke sensor is faulty.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

*Solution: The services of a qualified technician will be required to first verify what set off the alarm, and then to correct the problem.

BLACK HOT EXHAUST ALARM (smoke overtemperature):

Indicates that the smoke temperature is too high because of:

- Lack of ordinary cleaning maintenance of the appliance.
- Incorrect combustion calibration.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

Solution: In the first case, routine maintenance must be carried out, and in the second case, the services of a qualified technician are necessary to modify the combustion parameters.

FAN FAILURE ALARM (smoke extractor faulty):

This appears if there is a fault on the smoke exhauster.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

NO LIGHTIN- ALARM- (failed ignition):

This occurs when the ignition phase fails.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

Solution: Check the cleaning of the burn pot and the part underneath (see section 4.1.3).

All the fuel present in the burn pot must always be removed.

NO-PELLET ALARM:

The fuel in the reservoir is depleted.

Solution: with the appliance switched off and cold, all the fuel present in the burn pot must always be removed.

IMPORTANT: Before restarting the appliance, the fuel reservoir must be refilled and the [INITIAL LOAD] function must be activated from the menu.

IMPORTANT: If the fuel shows a tendency to extinguish, correct and increase the calibration parameter, using Menu 09 - PELLET TYPE.

ALARM THERMOSTAT :

This occurs when the safety thermostat detects a temperature higher than the trigger threshold. The thermostat intervenes and switches off the screw auger, as it is placed in series with its power supply, and the appliance signals the alarm status.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

Solution: Once the switch-off phase is terminated, the following operations are necessary:

- Set the switch located on the rear of the appliance to "0".
- Reset the thermostat located under the reservoir cover beside the fuel loading mouth (unscrewing the black hood that covers it, pressing the button found at the centre and refitting the hood).

ALARM PRESSURE SWITCH:

This occurs when the pressure switch detects that the combustion chamber door or the reservoir top are open, or if it detects an overpressure in the smoke exhaust flue. The pressure switch intervenes and switches off the screw auger, as they are electrically connected in series, and the appliance signals the alarm status.

On the display the relative message appears and the appliance goes into alarm condition, initiating shut-down.

Solution: If the overpressure is temporary, the appliance starts working properly once this overpressure disappears; if it persists, make sure that the door and hopper lid are correctly closed. Also check that the smoke discharge flue is not clogged.

ALARM TRIAC COC FAILURE:

Indicates the presence of faults or malfunctioning in the auger gear motor.

*Solution: The services of a qualified technician will be required to first verify what set off the alarm, and then to correct the problem.

ALARM ENCODER COCLEA:

This appears when the screw auger is blocked.

The relative message appears on the display and the appliance goes into alarm condition, initiating shut-down.

Solution: If, on re-ignition, the anomaly is repeated, the intervention of a qualified technician is needed to check the causes that have triggered the alarm.

ALARM KCC:

Indicates the malfunction of the combustion control system.

*Solution: The services of a qualified technician will be required to first verify what set off the alarm, and then to correct the problem.

LOW DRAUGHT ALARM:

Indicates low draught indicated by the KCC device caused by:

- A lack of periodic maintenance to clean the appliance.
- Low draught in the smoke flue.
- The seals of the unit are not in good condition.
- The combustion chamber door is open or the hopper lid open.

*Solution: The services of a qualified technician will be required to first verify what set off the alarm, and then to correct the problem.

3.3.7 SERVICE signal

To ensure constant and efficient operation of the appliance, you must carry out the routine maintenance work stated, which varies according to the hours of operation and the quantity of fuel burnt. When the appliance reaches 2000 hours of operation, the message SERVICE appears on the control panel, meaning that it has to be serviced by a qualified technician.

4 CARE AND MAINTENANCE

4.1 Recurrent maintenance

Do not forget that performing the following recurrent maintenance will ensure your appliance efficiency and proper operation for a long time.



WARNING: All cleaning of the various parts must be done when the appliance is completely cold and disconnected from the electrical power source (electrical plug disconnected).

Cleaning and maintenance operations to be carried out by the user cannot be done by unattended children.

4.1.1 Cleaning of display screen and exterior cladding elements

Clean with a dry, soft cloth; do not use any detergent or cleaning products.

4.1.2 Cleaning of ceramic glass

To perform if needed.



The quality and type of fuel as well as the way of use can determine the frequency of cleaning the ceramic glass.

1. We recommend the use of a specific glass cleaner for perfect cleaning;
2. spray some cleaner on a soft cloth to remove any tar and soot stains from the glass.



Never spray the ceramic glass directly with a specific glass cleaner or with any other cleaning product



The use of any abrasive sponges or similar for cleaning the ceramic glass panel is **FORBIDDEN**; failure to do so may result in permanent damage.



IMPORTANT: Ensure that you lock the door correctly with the equipped tool after opening it sideways to perform the ceramic glass cleaning.



4.1.3 Recurrent maintenance of type A

To perform at least twice a week or daily, depending on the operational conditions.

i By operating your appliance over a period of time you will find out how frequently it needs to be inspected and cleaned.

WARNING: All cleaning of the various parts must be done when the appliance is completely cold and disconnected from the electrical power source (electrical plug disconnected).

The frequency of maintenance performed on your appliance is directly proportional to the operation hours and the performance requested.




CAUTION: For safety reasons, before cleaning the appliance make sure the ashes have cooled completely and then remove them with a vacuum cleaner.

The recurrent maintenance works of type A are as follows:


1. Open the appliance door slowly, so as to avoid the displacement of ashes accumulated.
2. Remove the grille [G].

3. Remove the burn pot [B].


- 4a. From burn pot [B], remove any ashes and ash material that may accumulate and clog the air admission openings by means of a vacuum cleaner and a wire brush or any other tool sufficiently abrasive.
- 4b.

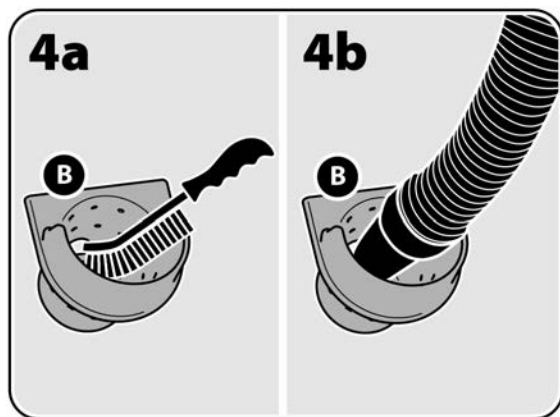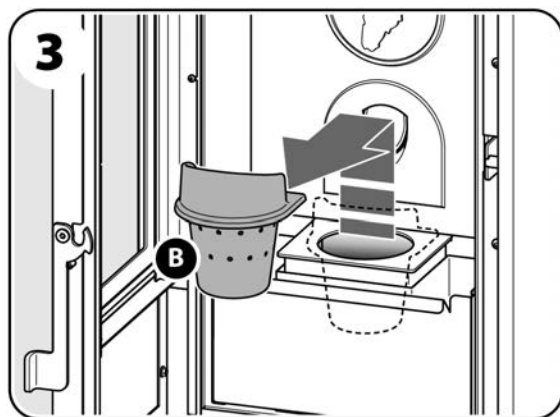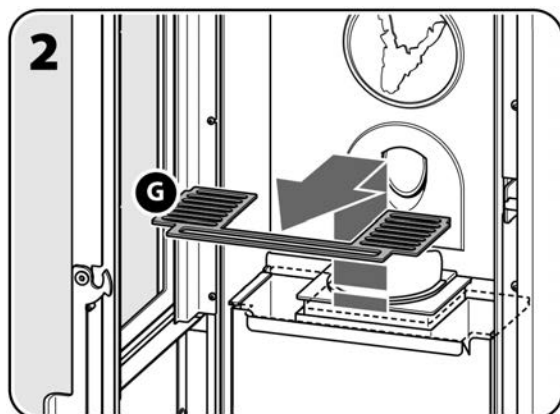


5. Lift the firebox ash collecting drawer [H] and take it completely out to empty it.

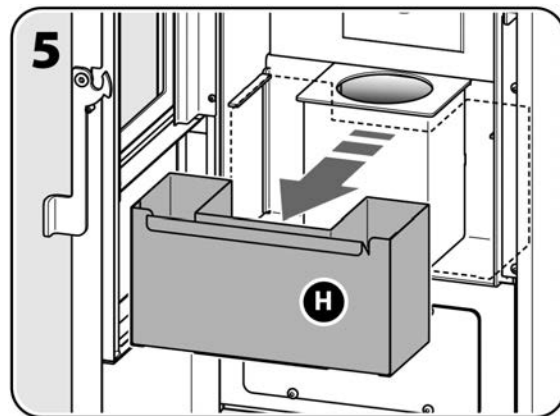

6. Remove any ashes that may accumulate inside the firebox and the burn pot ash-tray by means of a powerful vacuum cleaner (1000÷1300 W).

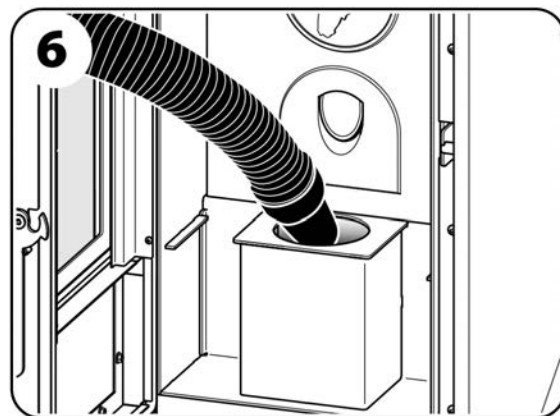


7. With a vacuum cleaner remove the ashes from the area underneath the ash collecting drawer.

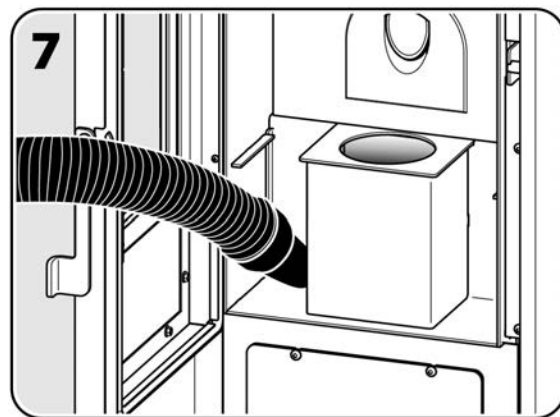

8. Vacuum clean all the ashes collected on the door.

When the cleaning is completed, install all the parts removed following the inversed order.

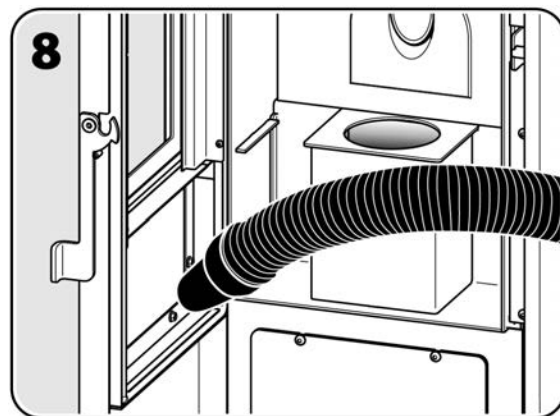

4.2 Routine maintenance

Do not forget that performing the following routine maintenance (type B and C) will ensure your appliance efficiency and proper operation for a long time. The same care and maintenance should be provided to the smoke exhaust system so as not to invalidate the work done on the appliance.



IMPORTANT: after approximately 150 h of use or after 200 kg of fuel consumed, it is important to check and clean the smoke exhaust through the corresponding inspection doors or, if they are not present, dismantle the removable components.

4.2.1 Routine maintenance of type B

To perform in addition to recurrent maintenance of type A every 350÷400 hours or 500÷600 kg of pellets.



WARNING: All cleaning of the various parts must be done when the appliance is completely cold and disconnected from the electrical power source (electrical plug disconnected).






CAUTION: For safety reasons, before cleaning the appliance make sure the ashes have cooled completely and then remove them with a vacuum cleaner.

This operation must be carried out by removing the door and partially the outer casing. (For the correct way to remove the casing, see section 2.3.7).


The routine maintenance works of type B are as follows:

1. Take hold of the plate [P] with both hands, lift it, tilt it slightly and remove it, being careful not to bump against the device frame.
2. Clean all the back of the heat exchanger with vanes [S] with a 90° metal brush and suck the soot.
3. Clean out well all the soot and ash removed from the back of the heat exchanger [S], using a vacuum cleaner.

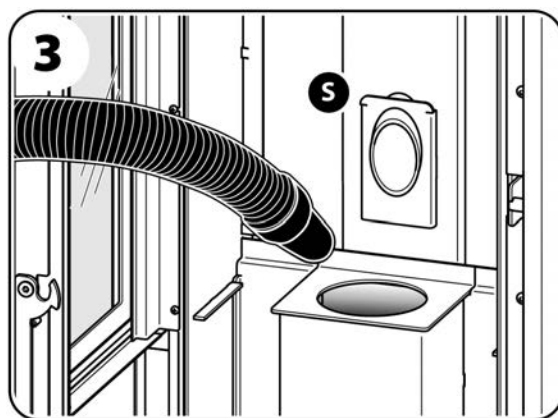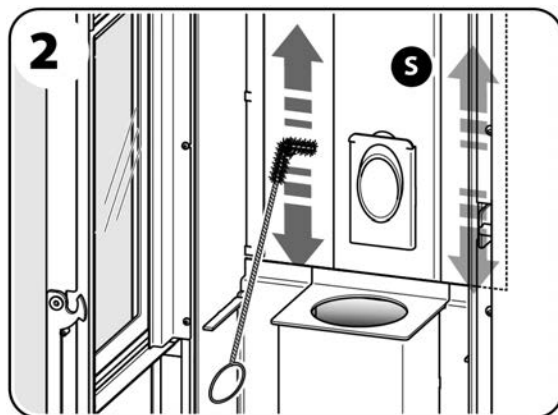
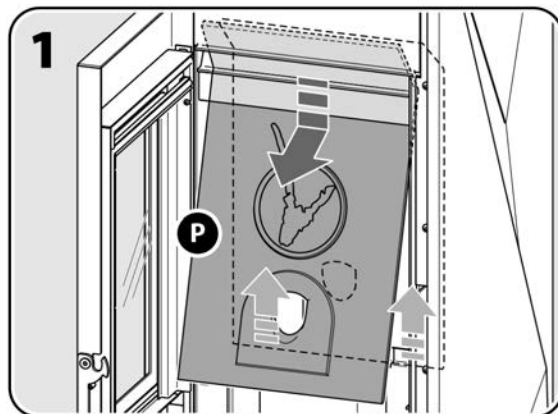


4. Unscrew and remove the 4 screws holding the cover of the heat exchanger dust collecting compartment [V].

Remove the heat exchanger dust collecting compartment lid [V] taking care to maintain the seal.

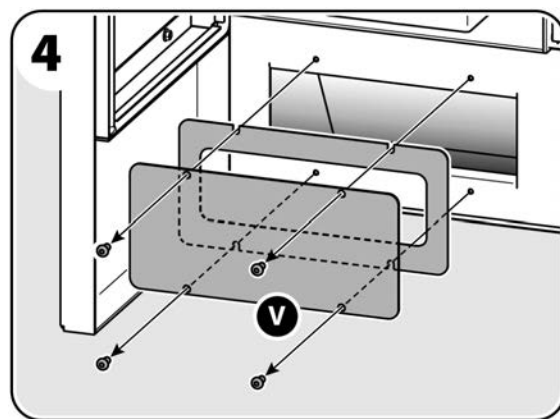


- 5a. Unscrew the butterfly screw [A] and remove the deflector [D] placed at 5b. the bottom of the heat exchanger dust collecting compartment.

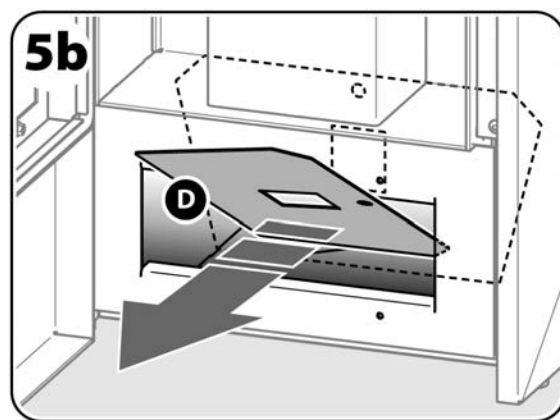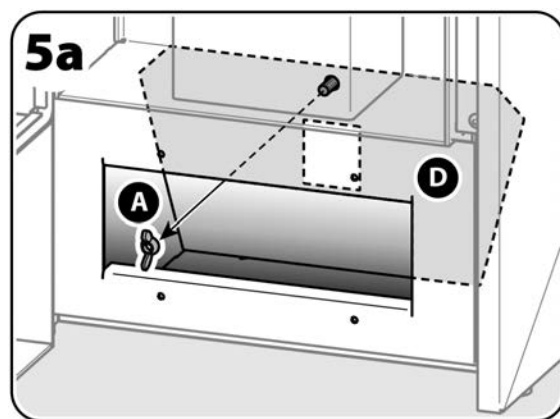

6. Remove the soot with a shovel, then clean out well the soot and ash remaining in the heat exchanger dust collection compartment with a vacuum cleaner.

When the cleaning is completed, install all the parts removed following the inversed order.

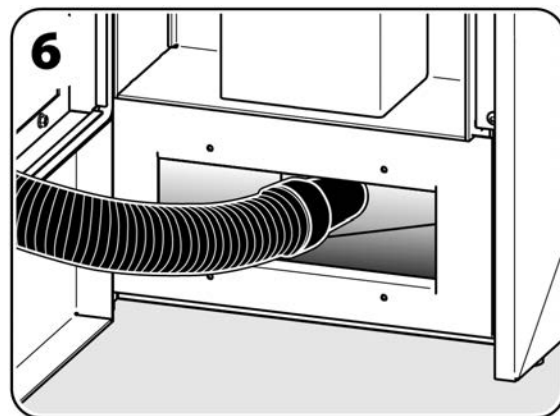

4.2.2 Routine maintenance of type C

To be done at the end of the heating season or when the appliance reaches 2000 hours of operation when the *SERVICE* message appears, in addition to the recurrent maintenance work type A and to the routine maintenance work type B.


i The routine maintenance of type C shall be performed in order to clean the smoke exhauster [Q] and its housing and to facilitate the cleaning of the lower part of the heat exchanger. This maintenance work is to be completed on both sides of the appliance after removing the external lining.

! **CAUTION:** The following operation should be performed by a qualified service technician who will assess the need to remove the smoke extractor to clean it.

! **WARNING:** All cleaning of the various parts must be done when the appliance is completely cold and disconnected from the electrical power source (electrical plug disconnected).

! **CAUTION:** For safety reasons, before cleaning the appliance make sure the ashes have cooled completely and then remove them with a vacuum cleaner.

i The smoke exhauster [Q] cannot be detached from the unit to which it is connected by an electric wire; to perform the following maintenance works, carefully lay it sideways.

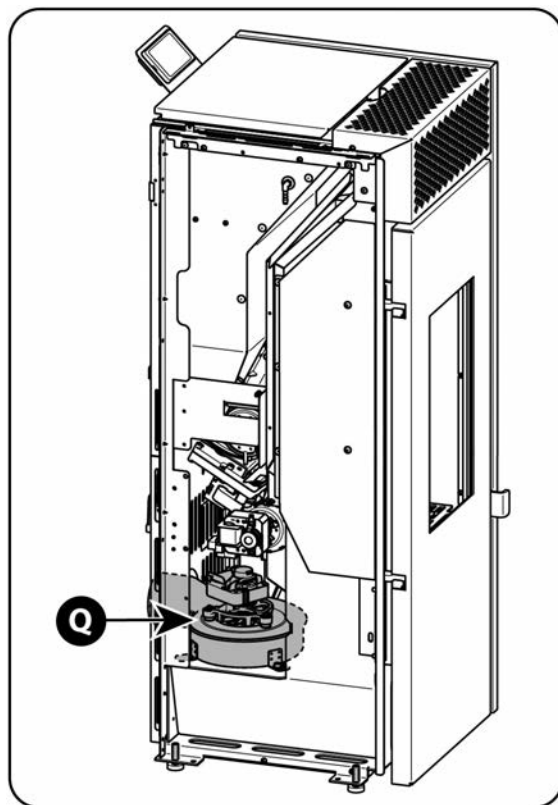

4.2.3 Gasket control

At the end of the heating season, during the routine maintenance of type C, have the qualified technician check the integrity of the gasket sealing the door and of all the removable parts.

They should be replaced once every one or two or three years, depending on the type of appliance and mostly on the operation duration. In order to ensure an air-tight assembly the gaskets should maintain their characteristics of elasticity; as soon as they harden they need to be replaced.



IMPORTANT: Gasket control is much more important in certified airtight appliances installed in low energy households because the combustion chamber must always be airtight.

4.2.4 Cleaning of vertical venting pipes

Even with the best appliances and chimneys the formation of creosote deposits is unavoidable. Therefore it is necessary to clean the chimney and the vertical venting pipes regularly in order to avoid or reduce them.

Cleaning is recommended at least once a year and even more often if the appliance is used daily and fuel with features different from those illustrated in section 1.4 is employed.

We recommend to let the cleaning process being realized by a professional chimney sweeper, ask the address to your dealer.

The sweeper's intervention may represent an effective and economic solution to protect the installation from corrosion and keep it in efficiency to grant those essential safety conditions that allow us to live with more serenity.



Just before the beginning of the next season, particularly as regards unoccupied houses, we recommend checking the smoke channel and the chimney, in order to be sure that there is no clogging due to insects, birds or small mammals' nests.

4.3 Putting your appliance out of service

When the appliance is not going to be used for a long time, usually at the end of the heating season, beside the routine maintenance procedures we recommend that you operate the appliance until the fuel is finished.



IMPORTANT: Unplug the appliance once you have finished using it for the season.

4.4 Failures/ Causes / Trouble-shooting

There is no power to the appliance (no LED on the appliance's control panel is lit).

- The power cord may have been damaged or disconnected from the plug.
- The appliance's fuse may have blown (see section 4.4.1).

The appliance fails to start repeatedly:

- The door gaskets could be in bad condition.
- The combustion chamber may have not been submitted to the required routine maintenance works (see section 4.1.3).
- The ignition resistance or the smoke temperature sensor may be blown (have the service staff check the appliance).

The convection fan does not operate:

- The fan may be blown or blocked (have the service staff check the appliance).

Pellets build up in the burn pot and spill out:

- The door gaskets could be in bad condition.
- The burn grate may be clogged (see section 4.1.3, figure 4).
- The appliance may have not been submitted to the required routine maintenance works (see sections 4.1.3 and 4.2).
- There is insufficient combustion air (if the problem persists even after the appliance cleaning, have the service staff check the appliance).
- The smoke exhauster may not be working correctly (in this case have the service staff check the appliance).
- The fuel may be damp.
- The combustion air inlet may be obstructed.
- The parameter setting may not be unsuitable (see section 3.3.5).

There is smoke in the room:

- Check to see if the gaskets are in good condition.
- In the same room there could be another appliance working (stove, fireplace, wood cooker, suction hood) or not (open fireplace) whose draught may negatively affect that of your appliance or the reverse.
- The appliance may have not been submitted to the required routine maintenance works (see sections 4.1.3 and 4.2).
- Check to see if the exhaust system (pipe and chimney flue) is air-tight or needs to be cleaned out.
- Make sure that there is a good connection between the appliance and the chimney flue.
- The size of the chimney flue does not comply with the requirements in this manual (see sections 2.3.3 and 2.3.4).
- The first times the appliance is operated, the paint on the metal surfaces releases some smells. Simply aerate the room as necessary.
- Check to see if any impediment (plants, buildings) exceeds the height of the chimney cap thus preventing the smoke discharge.
- The draught in the chimney flue may not be adequate.

4.4.1 Replacement of fuse in service

If no LED is lit on the appliance's control panel when pressing the main switch, it may be necessary to replace the service fuse.




WARNING: This work can only be done after the appliance has cooled completely and has been disconnected from the electrical power source (electrical plug disconnected).

To replace the service fuse, which is located at the rear of the appliance on the side of the power connector, open the fuse box with a screwdriver and remove it, checking the integrity of the service fuse filament [S], and replace if necessary.

Then plug in the power cord and press the main on/off switch again.

If the problem persists or the fuse should blow again, contact Customer Service.

Fuse Specifications: "5A T 5x20 (delay-fuse)".

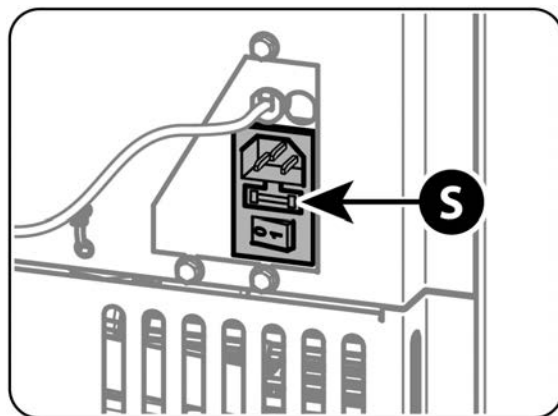


5 FOR THE AUTHORIZED SERVICE TECHNICIAN

5.1 Wiring-diagram



WARNING: Even after being switched off, the appliance is not disconnected from electrical power; therefore, before removing the cladding or the back panel and/or the screws holding the electronic control unit, always be sure to first unplug the power cord or turn off the circuit breaker.


PRACTICAL SCHEME LEGEND

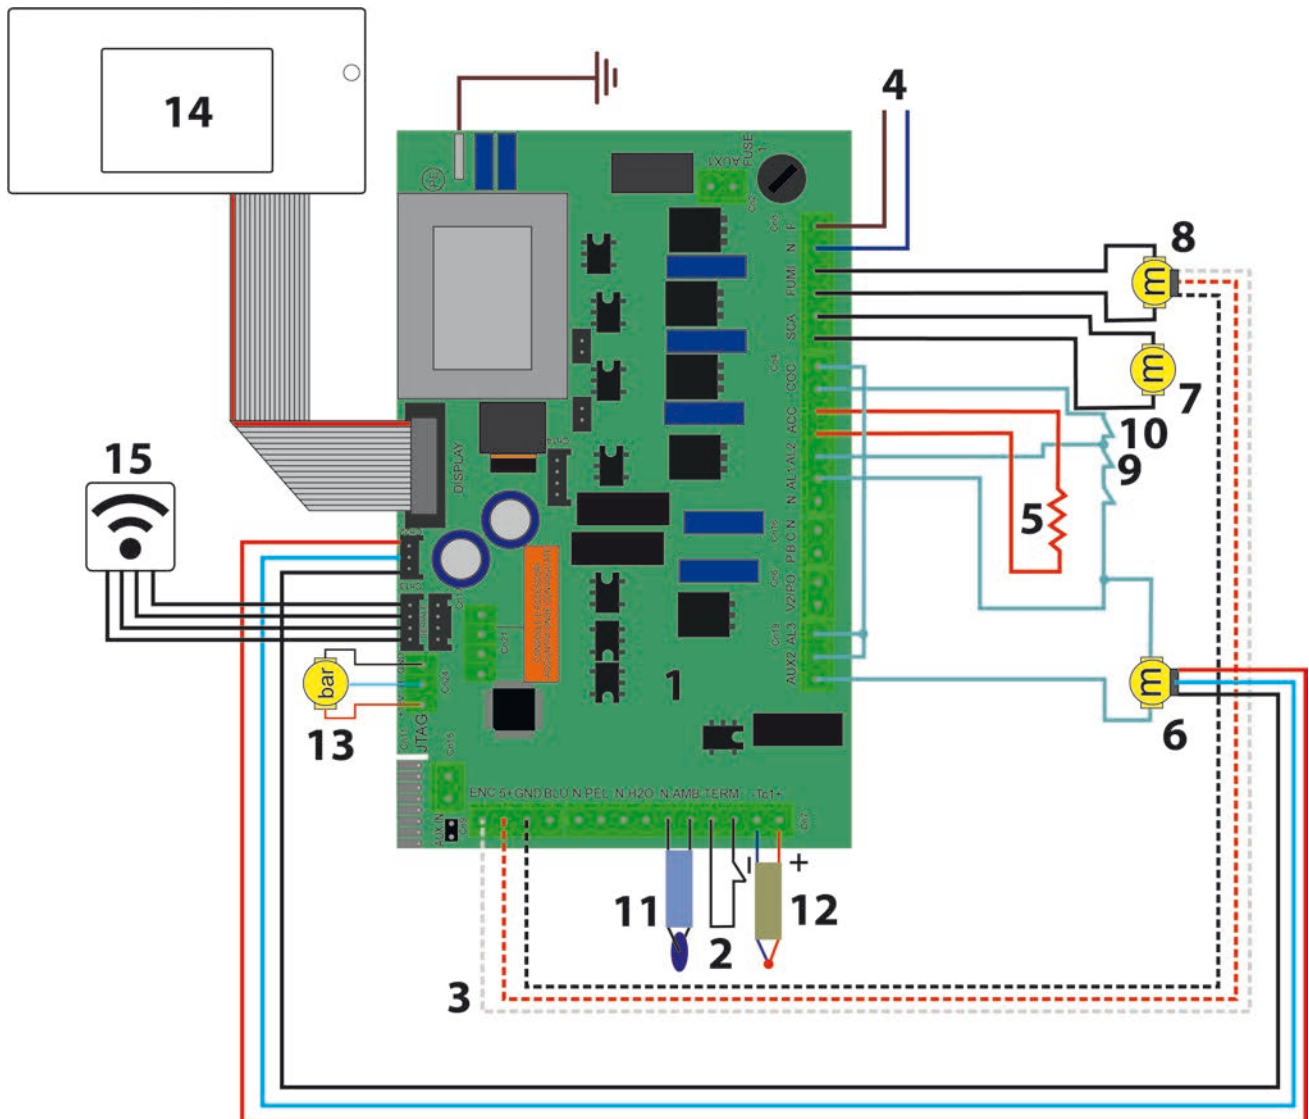


- | | | |
|----------------------------|-----------------------------|------------------------------|
| 1. Electronic card | 6. Screw auger geared motor | 11. Room temperature sensor |
| 2. External thermostat | 7. Convection fan | 12. Smoke sensor |
| 3. Smoke exhauster encoder | 8. Smoke exhauster | 13. KCC pressure transmitter |
| 4. Power 230 Vac | 9. Pressure regulator | 14. Control panel |
| 5. Ignition resistance | 10. Safety thermostat | 15. Wi-Fi module |

5.2 Connection to a thermostat or to a switch

The appliance can be switched on and off by using a clean contact from a thermostat or an external switch connected to the appropriate terminal [M] on the electronic card of the appliance and by setting the room temperature below 6°C (see section 3.3.4).

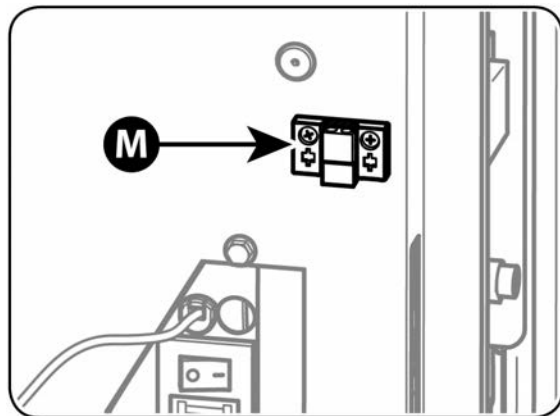

5.3 Spare parts list

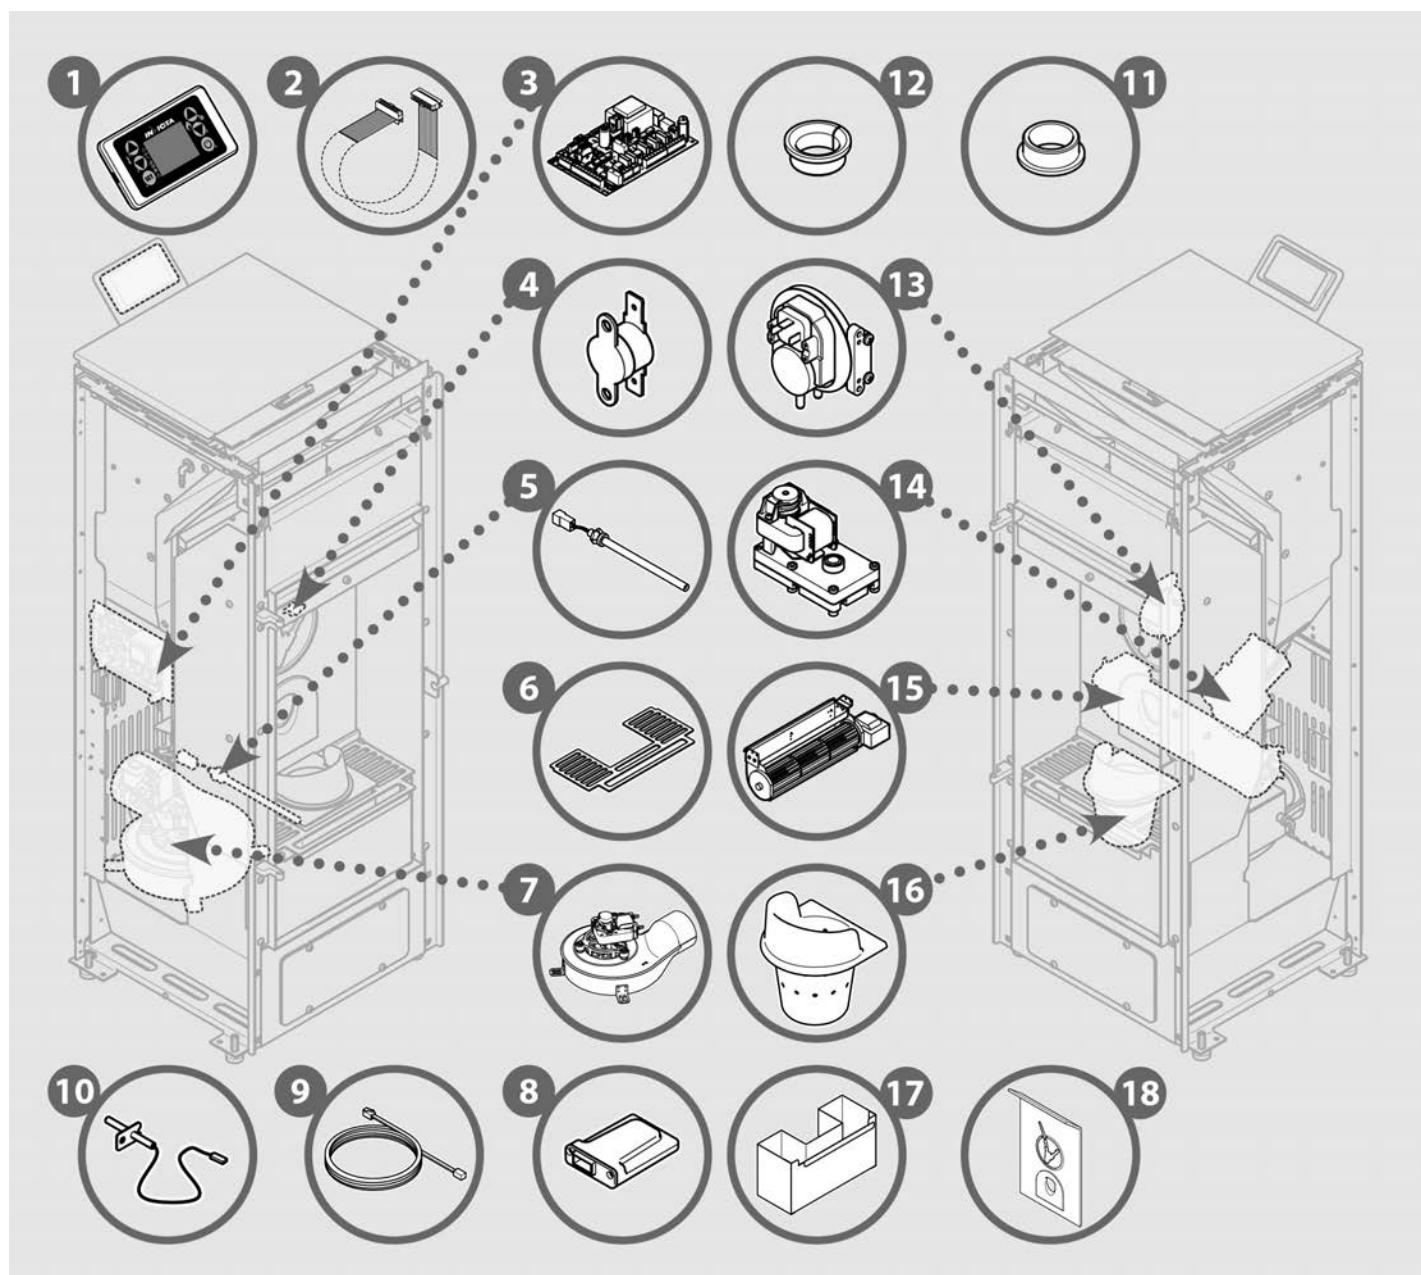

- | | | | |
|-----|---|-----|---------------------------------------|
| 1. | 1046202400I - Control panel | 13. | 1042200700 - Depressimeter |
| 2. | 1043030700 - Flat cable elect.card/security board | 14. | 1044003200 - Screw auger geared motor |
| 3. | 1041004900 - Neutral electronic card | 15. | 1040021000 - Convection fan |
| 4. | 1042004400 - Klixon probe | 16. | 1121125601 - Cast iron burn pot |
| 5. | 1049200300 - Ignition resistance | 17. | 1184079710 - Ash collecting drawer |
| 6. | 1102029250 - Grid for ash fall | 18. | 1121112001 - Back plate |
| 7. | 1184081810 - Smoke exhauster | 00. | 1251114300 - Ceramic glass |
| 8. | 1532903900 - Wi-Fi module | 00. | 1090300510 - Ceramic glass gasket |
| 9. | 1042003900 - Room temperature sensor | 00. | 1090104710 - Door gasket |
| 10. | 1042004200 - Smoke sensor | 00. | 1090811709 - Smoke box gasket |
| 11. | 1010009200 - Teflon bearing | 00. | 1090300710 - Smoke exhauster gasket |
| 12. | 1010009000 - Bearing | | |

5.4 Servicing record

1	3
2	

1	3
2	

1	3
2	

1	3
2	

1	3
2	

1	3
2	

1. DATE
2. SIGNATURE OF SERVICING STAFF
3. SERVICING DESCRIPTION

The Company reserves the right to make any alterations resulting from any technical or commercial reasons it considers appropriate without notice and assumes no responsibility for any possible mistake or inaccuracies in this brochure. The reproduction in whole or in part of the photographs, drawings or texts is forbidden. Infringements will be punished by law. Data and measurements are provided purely as an indication.



Zone Industrielle Lieu-dit « La Gravette »
08350 DONCHERY – Francia
Tel. +33 0324 277171